 



TOTO

WASHLET S7

Instruction Manual



TCF47360***

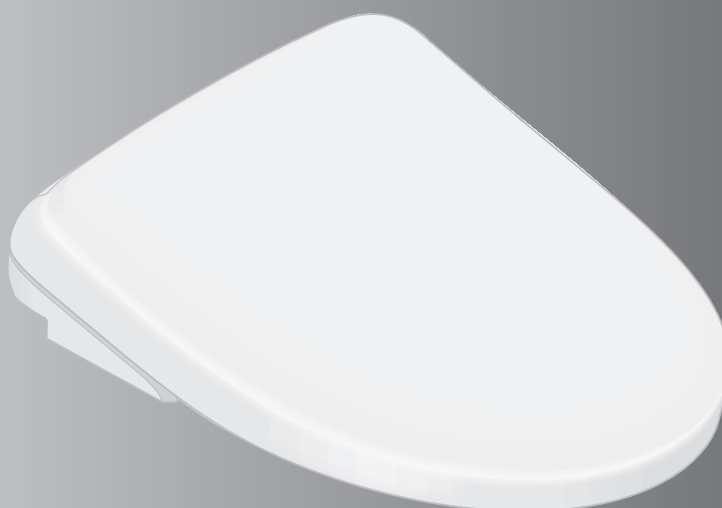

Thank you for your recent purchase of this product.

Please read the enclosed information to ensure the safe use of your product.

Be sure to read this Instruction Manual before using your product and keep it in a safe place for future reference.

Table of Contents

Introduction

Safety Precautions	4
Operational Precautions	8
Parts Names	10
Preparation	12
Using the Product for the First Time.....	12

Operation

Basic Operations	14
Mechanism of Auto Functions	14
Auto open / close	14
Auto bowl CLEAN	14
Deodorizer	14
Auto power deodorizer	14
Auto flushing	14
Auto wand CLEAN	14
Auto underseat CLEAN	15
Soft light	16
CLEAN indicator	16
Using the Remote Control	17
Stop	17
Rear washing	17
Rear soft washing	17
Front washing	17
Wide front washing	17
Warm air drying	17
Water pressure adjustment	17
Wand position adjustment	17
Pulsating washing	17
Oscillating washing	17
Wand CLEAN	18
Power dedorizer	18
Full flush	18
Light flush	18
Opening and closing the toilet lid	18
Opening and closing the toilet seat	18
Personal setting	18
Low battery warning mark	18
Power ON/OFF button	19
Wand cleaning	19
Manual spray	19
Warm water temperature	19
Toilet seat temperature	19
Drying air temperature	19
Auto energy saver / Auto energy saver+	19

Timer energy saver	19
Auto open / close ON / OFF	19
Setting confirmation	19
Auto flushing ON /OFF	19
Temperature Adjustment.....	20
Warm water / Toilet seet / Drying	20
Changing Settings.....	22
Setting List	22
The energy saver features	24
How to Set	26
Auto energy saver.....	26
Auto energy saver+.....	26
Timer energy saver	27
Auto flushing	27
Auto flush delay	28
Auto flush lid closed	28
Auto open / close	30
Auto close delay	30
Auto open delay	31
Seat/lid	31
Auto wand CLEAN	32
Auto bowl CLEAN	32
Auto underseat CLEAN	33
Deodorizer	33
Auto power deodorizer	34
Night light	34
Soft light	35
Bowl light	36
CLEAN indicator	36
Beep sound	37
Pressure/Position setting	37
Personal setting	38
Registering Personal Settings	38
Sensor detection range	39

Maintenance

Maintenance	40
Before maintenance	40
Main Unit	40
Manual spray	41
Gap between the Main Unit and Bowl Unit	42
Gap between the Main Unit and the Toilet Lid ...	43
Wand	44
Wand cleaning	44
Deodorizing Filter	45
Drain plug with water supply filter	46

Reference

What to Do?	47
If the water does not flow due to a water service interruption	47
If you cannot operate with the remote control	47
Replacing the batteries	47
Freeze Damage Prevention	48
Long Periods of Disuse	49
How to drain the water	49
Resupplying the Water	50
How to remove the operation guide	51
Troubleshooting	52
Please check first	52
Rear Washing, Front Washing and Wand	53
Warm air drying	54
Flushing	54
Toilet Seat and Toilet Lid (Auto open/close) ...	55
Toilet Seat and Toilet Lid	57
Auto flush lid closed	57
Energy Saver	58
Deodorizer	58
Auto bowl CLEAN, Auto underseat CLEAN, Manual Spray	59
Lights	59
Others	59
Specifications	61
Safety Guidelines	62
Limited Warranty	63

Safety Precautions

These precautions are important for safe usage. Be sure to follow them and use the product correctly. The following symbols are used to indicate important safety instructions for the use of the product.

Symbols and Meanings



WARNING

May result in death or serious injury.



CAUTION

May result in injury or property damage.



WARNING

Never disassemble, repair or alter.

Doing so may cause fire, electrical shock, overheating, short circuit or breakdown.

Do not use the product if a malfunction occurs.

In case of breakdown or other problem, be sure to cut off power by means such as unplugging the power plug.

Close the water shutoff valve to stop water supply. Possible malfunctions:

- Water is leaking from a pipe or the main unit.
- The product is cracked or broken.
- The product makes a strange noise or emits a strange odor.
- The product emits smoke.
- The product is abnormally hot.
- The toilet seat cushion is out of place.

Continued use after malfunction could cause a fire, electrical shock, heat, short circuit, injury or water damage.

Do not use other water than allowed by the laws and ordinances of the region of use. Only Use potable water.

Do not use seawater or recycled water.

Doing so may cause irritation to the skin and malfunction.

Keep cigarettes and other open flames away from the product.

Failure to do so may cause fire.

Refrain from sitting on the seat for long periods.

It may cause low-temperature burns.

To prevent the following persons from getting a moderate temperature burn during use, other person should turn off the toilet seat heater and set the dryer temperature to "Low".

- Young children, the aged and other users unable to set the temperature appropriately themselves.
- The ill, physically disabled and others who do not have freedom of movement.
- Those using any medicines that cause drowsiness (sleeping or cold medicine), those who have been drinking heavily, anyone severely fatigued and anyone else liable to fall asleep.

If the power cord is damaged, avoid danger by having the manufacturer's repair department or equivalent specialist replace it.

Turn the power OFF before maintenance or inspection.*1

Failure to do so may cause electrical shock or malfunction.

Always the power OFF before removing the main unit.*1

Failure to do so may cause a fire or electrical shock.

When leaking battery fluid adheres to your body or clothes, wash it away with clean water.

The fluid may damage your eyes or skin.

*1 How to turn off the product (→Page 13)

WARNING

Do not stick a finger or anything else into the warm air outlet.

Do not place anything on the warm air outlet or drape clothes over it.

Doing so may cause burns, electrical shock or malfunction.

Do not install the product on moving vehicles such as wheeled vehicles or boats.

Doing so may cause fire, electric shock, short circuit or malfunction.

The toilet seat, toilet lid, main unit, or other parts may come loose and fall off, resulting in injury.

Do not use any power supply other than the one specified.

AC 220-240 V, 50/60 Hz

Doing so may cause fire or excessive heat.

This is an electrical product. Do not install it anywhere water is likely to get on the product or anywhere with humidity high enough that water is likely to form on the surface of this product. When using the product in a bathroom, install a fan or ventilation port and ensure good air flow through the bathroom.

Failure to do so may cause fire or electrical shock.

Always connect the product to the cold water supply.

Connecting to hot water supply may result in burns and equipment damage.

Preliminary studies in females suggest that overuse of continuous spraying can increase the possibility of vaginal mucosa drying and potential reduction in desirable microbial organisms.

Although these studies have not been validated, please consult your healthcare provider for concerns regarding whether these circumstances may apply to you.

More importantly, if you are an individual suffering from any immune deficiency as a result of disease, chemotherapy, or other medical condition compromising the immune system you should consult your healthcare provider before use of this product.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Do not touch the connection of power cord with wet hands.

Doing so may cause electrical shock.

Do not get any water or cleaning solution on the main unit, in the gap between the main unit and bowl unit, or on the power supply connections.

Doing so may cause fire, electrical shock, heat or short circuit.

Doing so may cause the product to crack resulting in injury or water damage.

Do not touch the power source connection during thunderstorms.

Doing so may cause electrical shock.

Do not allow the water supply hose to touch the power source connection.

Doing so may cause condensation resulting in a fire, electrical shock, heat or a short.

Do not do anything that may damage the power cord or power source connection.

Do not strike, yank, twist, excessively bend, damage, alter, or heat the power cords.

Also, do not place anything heavy on, bind or pinch the power cords.

Using a damaged power cord may result in a fire, electrical shock, heat or short.

Confirm that a properly grounded outlet^{*2} or terminal block^{*3} has been installed.

Failure to install a grounded outlet could cause electrical shock in the event of a malfunction.

* If there is no ground installed, ask the contractor who did the installation to install the ground.

^{*2} If the product has a power plug.

^{*3} If the product does not have a power plug.

Safety Precautions

WARNING

Do not use a loose or faulty electrical outlet.*¹

Doing so may cause fire or short circuit.

Do not use any outlet beyond its specified rating.*¹

Plugging too many plugs into the same outlet, for example using outlet splitters, can cause fire due to heat.

Insert the power plug securely into the outlet.*¹

Failure to do so may cause fire, heat or short circuit.

Check that the power plug is waterproofed with silicone rubber.*¹

A power plug that is not water-proofed may cause fire and electrical shock.

* If the power plug is not water-proofed, ask the contractor who did the installation to water-proof it.

To unplug, hold the power plug, not the power cord.*¹

Do not unplug by pulling the power cord.*¹

Pulling on the power cord may cause damage and result in fire or heat.

CAUTION

Do not use the product if the main unit is unstable.

Doing so may cause the main unit to come loose and fall, resulting in injury.

If the product is damaged, do not touch the damaged section.

Doing so may cause electrical shock or injury.
Replace it immediately.

Do not apply strong force, mechanical shock, step on or stand on the toilet seat, toilet lid or main unit. Also do not place any heavy object on the toilet seat, toilet lid or main unit.

Doing so may cause cracking or cause the main unit to come loose and fall, resulting in injury.

Doing so may damage the product and cause injury or water damage.

Do not lift up this product by the toilet seat or lid.

Do not raise the toilet seat or lid while objects are resting on top of the unit.

Doing so may cause the main unit to come loose and fall, resulting in injury.

When maintaining the plastic parts (main unit etc.) or the water supply hose, use a pH neutral kitchen detergent diluted with water. Do not use any of the following.

Toilet cleaner, household cleaner, benzene, paint thinner, powdered cleanser or nylon scrubbing brush.

These items may damage or crack the plastic and cause injury or malfunction.

These items could damage the water supply hose and cause a water leak.

To prevent a sudden water leak, do not remove the drain plug with water supply filter when the shutoff valve is open.

Doing so will cause water to spurt out.

(→Refer to Page 46 for instructions on cleaning the drain plug with water supply filter.)

*¹ If the product has a power plug.

CAUTION

Do not fold or crush the water supply hose; do not damage by cutting with a sharp object.

Doing so may cause water leaks.

Do not install the base plate, which is not attached.

Doing so may cause damage.

If a water leak should occur, always close the shut-off valve.

When the ambient temperature is likely to drop to 0 °C or lower, prevent damage to the pipes and hoses due to freezing.

Frozen water pipes could cause the main unit and the pipes to break, resulting in a water leak.
Regulate the room temperature to prevent the pipes and hoses from freezing during cold months.
Drain the water.

When not using the product for a long time, close the shutoff valve, drain the water from the main unit and water supply hose, and then turn the power OFF.*2

When using the product again, allow the product to refill with water first. Otherwise, the water in the tank might become contaminated and cause skin inflammation or other problems. (→Refer to Page 50 for instructions on replenishing the water.)
Leaving the power on may cause fire or heat.

When installing the drain plug with water supply filter, make sure that it is securely tightened in its proper position.

Failure to securely tighten it may cause a water leak.

If the bowl is clogged, turn the power OFF*2 and remove the clog.*3

If the auto flush were allowed to function, it would make the wastewater in the bowl unit overflow and may result in water damage.
Use commercially available tools that are made for unclogging the bowl unit to remove the clogging.

Push the main unit securely on to the base plate.

After pushing the main unit until a click sound is heard, pull it slightly toward you to make sure that the product does not detach.
Doing so may cause the main unit to come loose and fall, resulting in injury.

Make sure of the plus and minus signs on the batteries before inserting them.

Remove depleted batteries immediately.

When replacing the batteries:

- Replace both batteries with new ones.
- Use the same brand for both new batteries (any brand available).

Failure to do so may cause the batteries to leak fluid, generate heat, rupture, or ignite.

When the product is supposed not to be used for long time, remove the batteries from the remote control.

Failure to do so may cause the batteries to leak fluid.

This product is classified as Class I Equipment and must be grounded.

Install this equipment so that the electrical outlet and power breaker are accessible.

Use the new hose set included with this equipment. Do not reuse an old hose set.

*2 How to turn off the product. (→Page 13)

*3 Available only when "Flush" button is located on the top side of the remote control. (→Page 18)

Operational Precautions

About the built-in body sensor

The body sensor detects human movement.

The toilet lid opening or "Auto bowl CLEAN" operation may be triggered by someone outside the bathroom as the sensor detects human movement through the door or wall in front of the main unit.

The sensor may not detect properly depending on the bathroom layout, resulting in the toilet lid not opening automatically.

For someone small such as a child, the body sensor may not detect properly, resulting in the toilet lid not opening automatically.

When you are using the toilet in standing position, the length of time it takes for "Auto flushing"^{*1} to complete or for the toilet lid or seat to close automatically depends on the bathroom layout, etc.

About the built-in seat sensor

When you sit on the toilet seat, the seat sensor turns ON, enabling you to use various features. (The deodorizer starts when the seat sensor makes a detection.)

A label indicating the position of the seat sensor is attached to the seat.


Detection by the sensor may be difficult when the toilet is used by someone small, such as a child, depending on how the person sits.

Sit on the seat with the label as a guide. (The label can be peeled off).

Sit down so that the seat sensor touches your skin directly. The seat sensor may not detect properly if there is a seat cover or clothing. If you use the booster seat for infants, the seat sensor may not detect properly, resulting in the toilet lid closing automatically during use. Turn "Auto open / close" OFF before use.

Water droplets collecting on the seat sensor may cause the main unit to malfunction. Be sure to wipe off any water droplets on the sensor.


Detection range

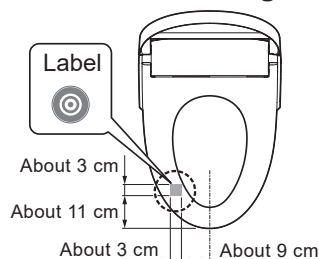

^{*1} Available only when "Flush" button is located on the top side of the remote control. (→Page 18)

For prevention of damage

Wipe plastic areas such as the main unit and remote control with a soft cloth tightly wrung out with water.

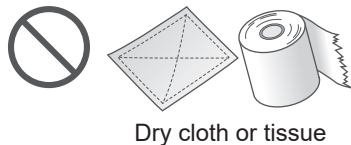

Do not lean against the toilet lid.




For prevention of malfunctions and failures

Do not block the remote control transmitter or receiver. May cause product to malfunction.

Turn the power OFF if there is a risk for lightning strike.*2

A toilet seat cover or a toilet lid cover cannot be used. Otherwise, the seat sensor may not detect properly. Additionally, the toilet seat and lid may not open or close properly.

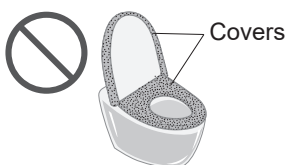

Do not urinate on the main unit, toilet seat or wand. Doing so may cause a failure or discoloration.

Do not apply strong forces to the control panel of the remote control.

When using a toilet cleaner to clean the toilet, rinse it off within 3 minutes and leave the toilet seat and toilet lid open.

If vapor from a toilet cleaner enters the main unit, it may cause a malfunction.

► Wipe off any cleaner that remains on the bowl unit.

Note: If "Auto flush lid closed" *1 (→ Pages 28, 29) is turned ON and you use the remote control to flush the bowl unit, the toilet seat and lid close before flushing the bowl unit. After the bowl unit has been flushed, open the toilet seat and lid.

Do not use the product with the toilet lid removed.

Do not expose to direct sunlight.

Doing so may cause changes in color, irregular heated seat temperature or remote control malfunction.

Use radios, etc. away from the product.

The product could cause interference with the radio signal.

If you use a booster seat for infants or a soft high-chair, remove it after use.

Keeping it installed may prevent some of the functions from being used.

Do not apply force to the remote control.

 
This cause malfunction.

► To prevent the remote control from being dropped, set it in the hanger when you are not using it. Be careful not to expose it to water.

Do not place anything on the toilet seat, and do not press them with hands.



Doing so may detect the seat sensor, causing the floor to get wet if buttons on the remote control are touched and warm water comes out from the wand.

This product is intended for use up to a maximum height of 2,000 m above sea level.



*2 How to turn off the product. (→Page 13)

Parts Names

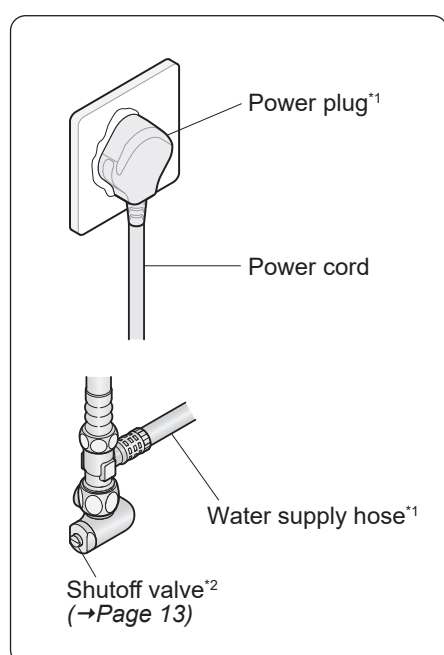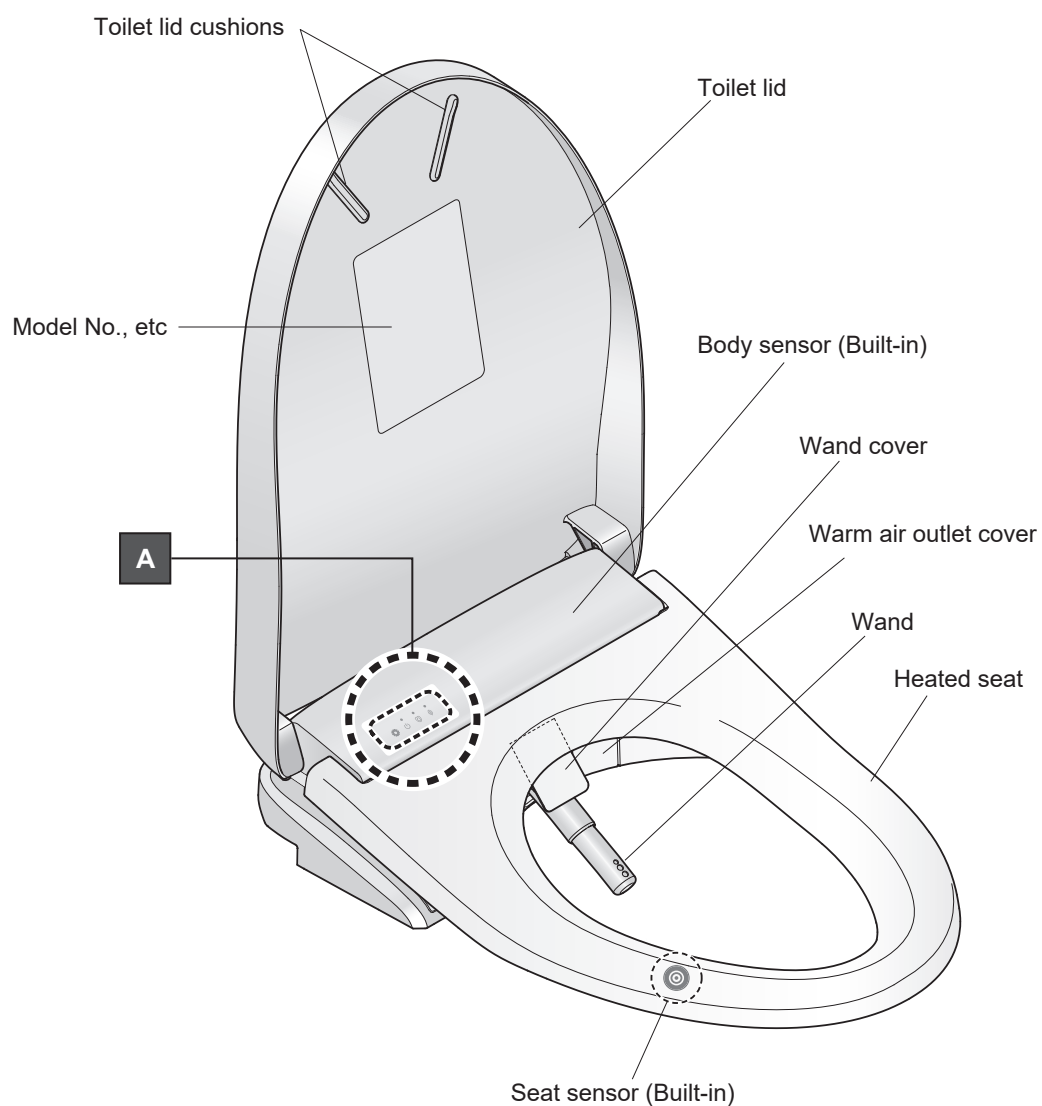

A: Main display

CLEAN indicator

Power LED

Seat LED







Energy saver LED



All the CLEAN indicator and LEDs illuminate in the figure.

^{*1} The shape may be different.

^{*2} The shape and location vary depending on the type of bowl unit and tank.

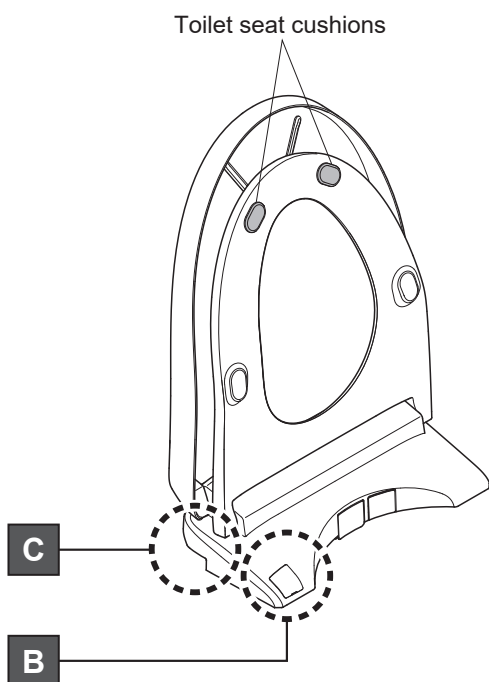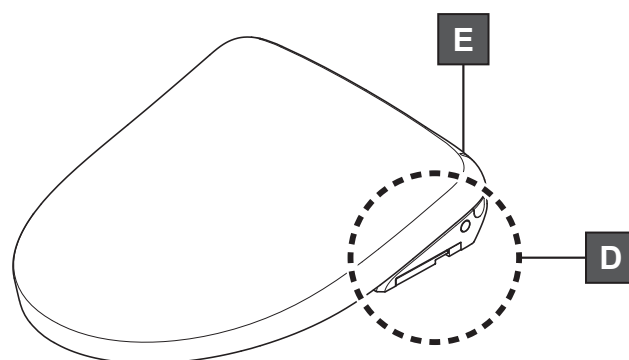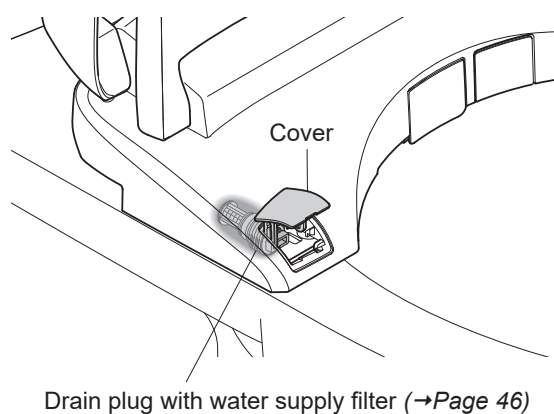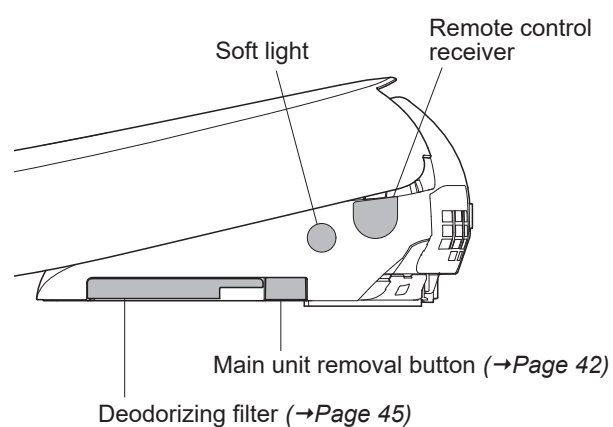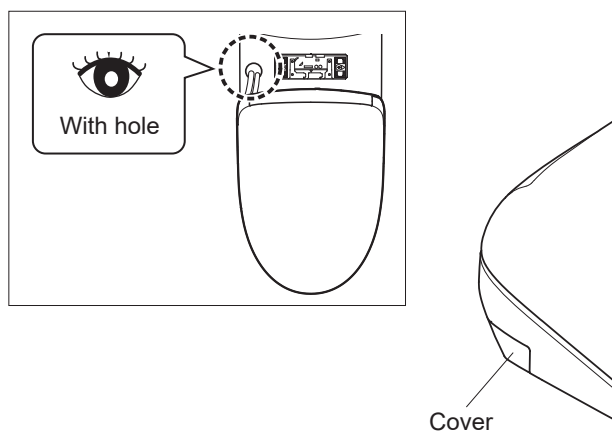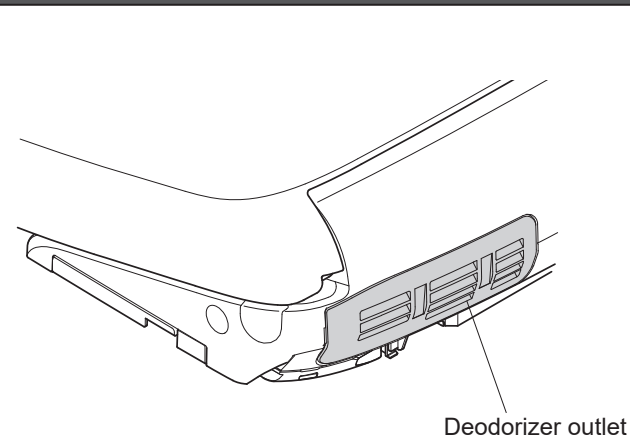
**B: Front side of the main unit****D: Right side of the main unit****C: Left side of the main unit****E: Rear side of the main unit**

Preparation

Using the Product for the First Time


1. Insert the battery

1.1 Remove the remote control from the hanger.

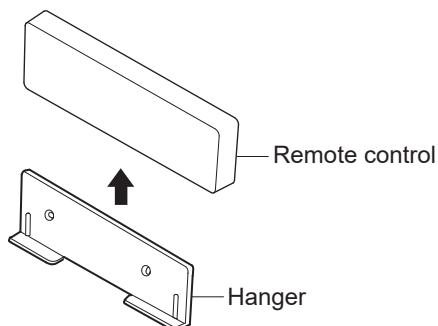

1.2 Open the battery cover and insert two AAA batteries. After inserting batteries, close the battery cover.

Remote control back side

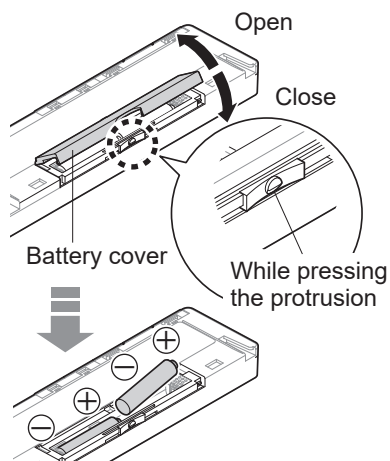

- When batteries are properly loaded, all the LEDs on the remote control light up for about 2 sec.

1.3 Mount the remote control in the hanger.


About the batterie

Use dry cell, alkaline batteries.


Be sure to follow "Safety Precautions" to prevent the batteries from rupturing or leaking fluid. (→Pages 4, 7)

If the remote control is secured to prevent theft

- 1) Hold the remote control and remove the hanger hooks (two locations, left and right)

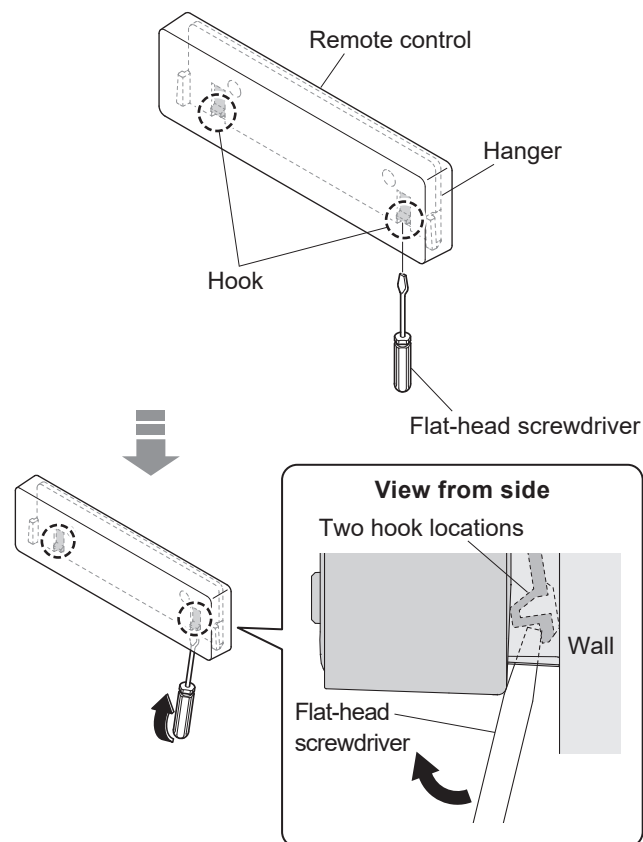

- 2) Remove the remote control from the hanger.

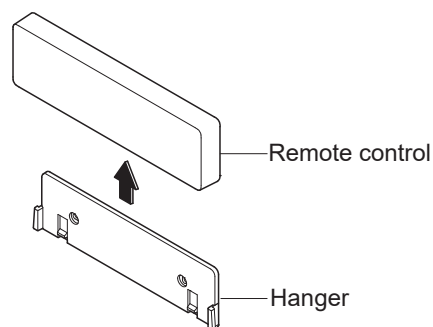

To secure the remote control again


Mount the remote control in the hanger.

2. Turn on the power

2.1 Switch the breaker on the distribution board to ON.

► The wand extends and then retracts.

2.2 Check the "Power" LED illuminates.

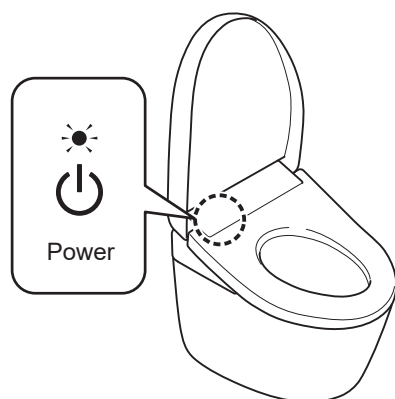

If the light is off

Switch "Power" to "ON" using the remote control.

To operate from the back of remote control


 Press "Power ON/OFF" button about 3 seconds or longer.

To operate from the front of remote control

Recommended if the remote control is secured to prevent theft, etc.

1)  and 

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

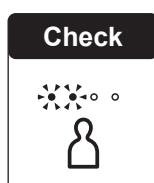

2) 

Press "Water pressure adjustment +" button.

3) 

Press "Water pressure adjustment -" button.

4) 

Press "Water pressure adjustment +" button.


To turn the power "OFF"

Switch the breaker on the distribution board to OFF.

► The "Power" LED is unilluminated.

3. Open the shutoff valve

3.1 Fully open the shutoff valve.

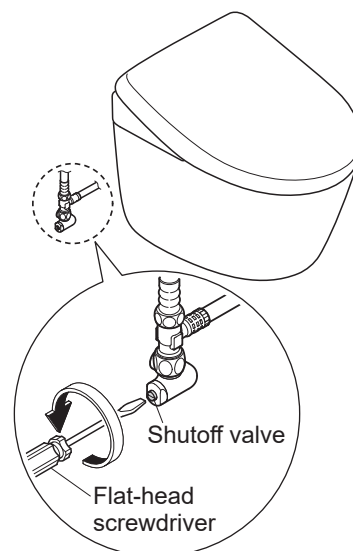

Basic Operations

Mechanism of Auto Functions

"EWATER+" is used automatically to clean the wand, bowl unit and under the seat.

 
1. As you approach



Auto open / close
Auto bowl CLEAN

Auto open / close

The toilet lid opens



When the toilet is used in standing position

Open the toilet seat with the remote control.

Auto bowl CLEAN

Pre-mist



The Bowl light lights up

A mist is automatically sprayed inside the bowl unit to make it more difficult for dirt to adhere.

2. As you sit*¹



Deodorizer

Deodorizer

Starts the deodorizer



Removing odors inside the bowl unit.

Note: Deodorizing filter needs regular maintenance.
(→Page 45)

3. As you stand up



Auto power deodorizer
Auto flushing
Auto wand CLEAN

Auto power deodorizer

After about 10 seconds

Starts the auto power deodorizer



It stops about 60 seconds after you stand up from the toilet seat

Auto flushing*²

After about 10 seconds

The toilet flushes*³



Note: The flushing varies depending on how long you sit on the toilet seat.

- Performs a light flush if the time is about 6 to 30 seconds.*⁴
- Performs a full flush if the time is about 30 seconds or longer.

Auto wand CLEAN

Only when the washing functions are used.

After about 25 seconds

The wand extends to clean with the "EWATER+" that comes out of the base*⁵



The Bowl light lights up

Note: "EWATER+" can also be used by pressing the remote control button. (→Page 18 "Wand CLEAN")

4. As you move away

When you move away



Auto flushing
Auto open / close
Auto bowl CLEAN
Auto underseat CLEAN

When the toilet is used in standing position

Auto flushing^{*2}

The toilet flushes^{*3}



Performs a light flush.^{*4}

Auto open / close^{*6}

The toilet lid and toilet seat close^{*3}



Auto bowl CLEAN
Auto underseat CLEAN

When you move away

After-mist^{*7}



The Bowl light lights up

EWATER+ mist is sprayed on the bowl unit and underneath the front of the toilet seat.^{*8}

Note: "EWATER+" can also be used by pressing the remote control button. (→Page 41 "Manual spray")

Auto open / close^{*6}

The toilet lid closes^{*3}



Operation under the default settings is described in "Mechanism of Auto Functions".

These mechanisms be changed.
 (→Pages 22–39 "Changing Settings")

What is meant by "EWATER+" ?

This water containing hypochlorous acid generated from chloride ions in tap water, is widely used for cleaning and disinfecting items such as food, utensils and baby bottles.

- Well water may not deliver the required effect. (Because the level of chloride ions is low.)
- "EWATER+" helps to minimize dirty surfaces, but does not eliminate the need to clean completely.
- The effect and duration vary depending on the usage environment and conditions.

*1 Water comes out from the area around the wand for several seconds while water is warmed up.

*2 Available only when "Flush" button is located on the top side of the remote control. (→Page 18)

*3 You can change to the setting that closes the toilet lid before flushing the bowl unit. (→Pages 28, 29)

*4 A full flush will be used depending on the type of bowl unit.

*5 When the washing functions (Rear washing and Front washing etc.) have not been used in 8 hours, the wand is cleaned automatically. (Water comes out from around the wand.)


*6 When you do not sit on the toilet seat, or when you sit on it or stand in front of the bowl unit briefly, it takes about 5 minutes before the lid closes automatically.

*7 Mist is sprayed on the bowl unit and underneath the front of the toilet seat that gets dirty easily. If the toilet lid is closed, it is opened to spray mist. (If you do not want to open the toilet lid when spraying mist →Page 56)

*8 When the washing feature (Rear washing and Front washing etc.) is not used for about 8 hours, mist is sprayed on the bowl unit automatically.

Basic Operations

Mechanism of Auto Functions

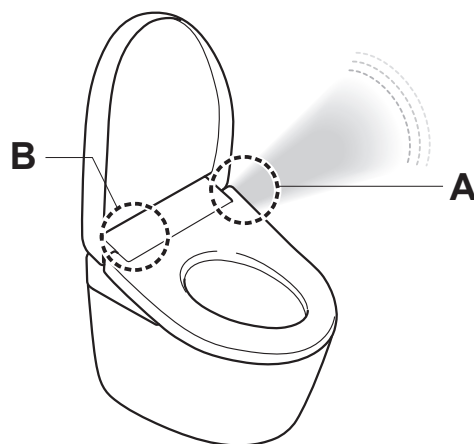

A Soft light

Lighting up the inside of the bathroom with a soft light.

It lights up as you approach the bowl unit and goes off after you move away from the unit and a certain time has passed.


Note: You can turn "Soft light" ON or OFF.
(→Page 35)

Night light

You can change "Soft light" and "Bowl light" to "Night mode", a lighting mode suitable for night. (→Page 34, 35)

B CLEAN indicator

Lights to show that the "Auto bowl CLEAN", "Auto underseat CLEAN", "Deodorizer", "Auto wand CLEAN", and "Manual spray" functions are operating.

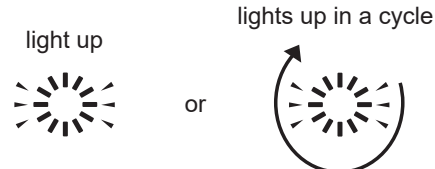


Lights only when the toilet seat is not in-use^{*1}

Note: You can turn "CLEAN indicator" ON or OFF.
(→Page 36)

^{*1} Except "Manual spray".

Using the Remote Control

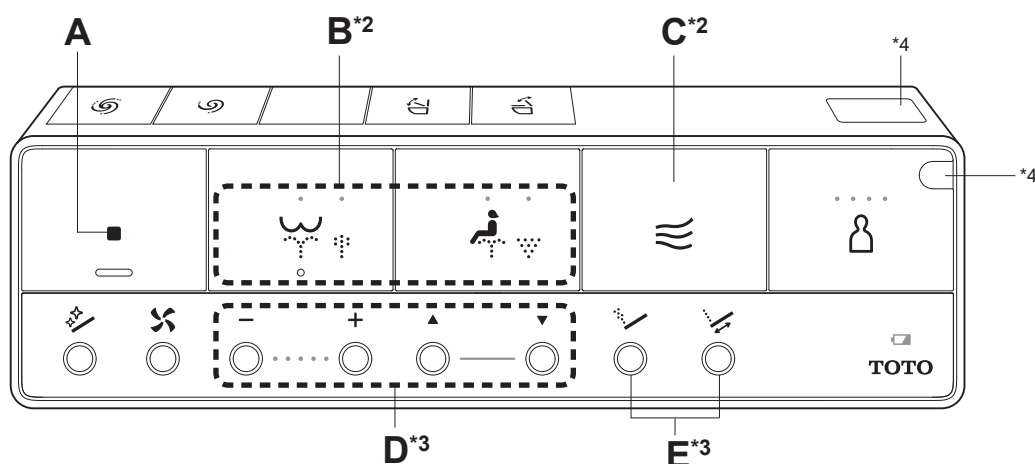

Operate the controls on the remote control; a beep sounds when the main unit receives the signal.

A  **Stop**
Stops the B or C operation.

B  **Rear washing**
Washes your rear.

 **Rear soft washing**
Washes your rear with soft embracing water flow.

The setting changes between  and  each time the  is pressed.

 **Front washing**
Serves as a bidet for ladies.

 **Wide front washing**
Gently washes a wide area.

The setting changes between  and  each time the  is pressed.

C  **Warm air drying**
Dries your rear.

D  **Water pressure adjustment**
You can adjust the water pressure to one of five levels. [-] Softer, [+] Stronger

After you press the "Water pressure adjustment" button, the set position will light for 10 seconds.



Wand position adjustment

 You can adjust the washing position to 5 different points between the front and the rear, using the [] and [] buttons.

Once use of the remote control is finished, the settings will return to the initial setting (3rd position) after a while, not exceeding a maximum of 5 minutes.

If you do not want to return to 3rd position (→Page 37)

Note: *Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.*

E  **Pulsating washing**
Washes with the water pressure pulsating between soft and strong.

 **Oscillating washing**
The wand moves back and forth to washes your rear thoroughly.

Note: *Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.*


*2 This cannot be used if the seat sensor is not working. Sit down so that the seat sensor touches your skin directly. (→Page 8)

*3 While using B, these buttons and their functions can be operated.

*4 Remote control transmitter.

Basic Operations

Using the Remote Control (Continued)

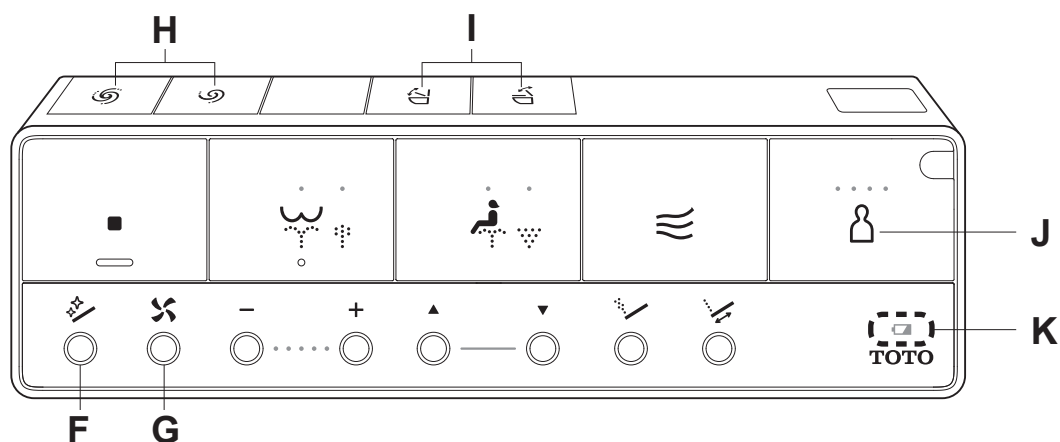

- F**  **Wand CLEAN**
Cleans the wand with "EWATER+"*1
- After wand cleaning, water comes out from around the wand.
- Note:** This function will operate automatically after using the washing functions (Rear washing, Front washing, etc.). (→Pages 14, 32 "Auto wand CLEAN")
- Note:** To clean the wand with it extended. (→Page 44 "Wand cleaning")

- G**  **Power deodorizer**
Press the button to increase suction power and remove odor.
- Cannot be used unless you are seated on the toilet seat.
- Stops automatically in 60 seconds if left running.

- H** **Flushing***2
The type of button varies depending on the type of bowl unit or tank.



Full flush

*3

Performs a full flush.



Light flush

*3

Performs a light flush.

Full flush/Light flush

Full flush



Toilet flush button not included



- I**  **Opening and closing the toilet lid**
Opens and closes the toilet lid.
-  **Opening and closing the toilet seat**
Opens and closes the toilet seat.

- J**  **Personal setting**
- Up to four people can register their preferred "Water pressure", "Wand position" and "Warm water temperature" settings. (→Page 38)

To use

- 1) Press the button to turn on the LED for the location of your setting.

- ○ ○ ○ Register 1
- ● ○ ○ Register 2
- ● ● ○ Register 3
- ● ● ● Register 4

- 2) Press the wash button you want to use ("Rear washing", etc.)

- K**  **Low battery warning mark**
(→Page 47)


*1 What is meant by "EWATER+" ? (→Page 15)

*2 Available only when "Flush" button is located on the top side of the remote control. (→Page 18)

*3 You can change to the setting that closes the toilet lid before flushing the bowl unit. (→Pages 28, 29)

Remote control back side

How to remove the remote control (→Page 12)

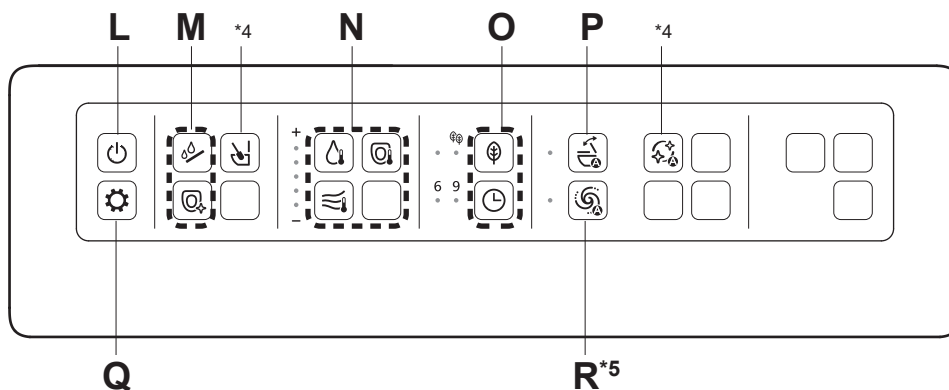

Operate the controls on the remote control; a beep sounds when the main unit receives the signal.

This section is an overview of the settings that can be configured with the remote control. See the corresponding pages for the detailed descriptions.

L  "Power ON/OFF" button Press and hold for 3 seconds or longer to turn washlet operation ON/OFF. ► If the remote control is secured to prevent theft. (→Page 13 Step 2-2.2)	O  Auto energy saver / Auto energy saver+  Timer energy saver Saving energy (→Pages 26, 27)
M  Wand cleaning (→Page 44)  Manual spray EWATER+ mist is sprayed on the bowl unit and underneath the front of the toilet seat. <i>Note: It cannot be used when the wand is out or when you are sitting on the toilet seat.</i>	P  Auto open/close ON/OFF Changing Settings (→Page 30)
N  Warm water temperature  Toilet seat temperature  Drying air temperature Adjust temperatures (→Pages 20, 21)	Q  Setting confirmation The current setting can be discerned from the LEDs. R  Auto flushing ON/OFF*5 Changing Settings (→Page 27)

*4 The button is not used with this product, so pressing it does not perform operations.

*5 The button (if any) cannot be used when the "Flush" button is not located on the top side of the remote control.


Temperature Adjustment

Warm Water, Toilet Seat, Drying

Five different temperature levels from high to low and "OFF" can be set.

Remote control back side

How to remove the remote control (→Page 12)

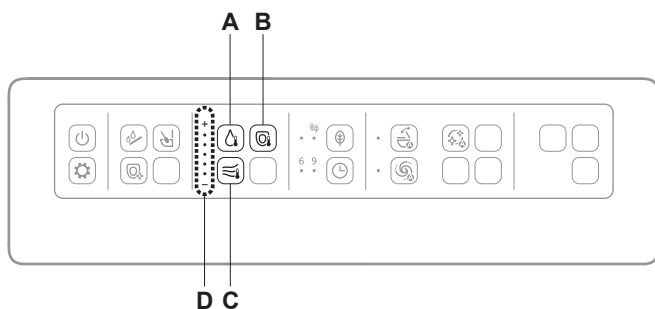

- A Warm water temperature button**
(When you want to adjust the warm water temperature)
- B Toilet seat temperature button**
(When you want to adjust the toilet seat temperature)
- C Drying air temperature button**
(When you want to adjust the drying air temperature)
- D Displaying the temperature level of the pressed button**

Adjusting the temperature

- 1.** Remove the remote control from the hanger.
 - ▶ If the remote control is secured to prevent theft. (→Page 12)
- 2.** Choose and press the button of the temperature that you want to set from the ("Toilet seat temperature" button), ("Warm water temperature" button) and (Drying air temperature button).
 - ▶ The current temperature level appears.


- 3.** Press the button selected in step 2 repeatedly until a desired temperature level illuminates.

- ▶ The setting changes each time the button is pressed once


OFF




Low

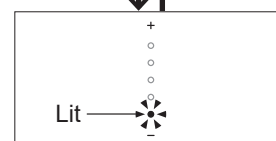


Medium-low

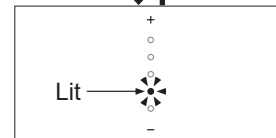


Medium

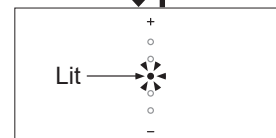

Medium-high

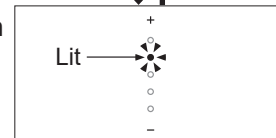

High

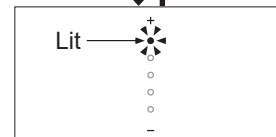

If adjusting the temperature does not warm up the toilet seat.

- ▶ Is the energy saver set to "ON"? (→Pages 24, 25)

Settings complete

- ▶ When seat temperature is set, the SEAT LED illuminates.



Note: The "Drying" cannot be turned "OFF".

If the button is not pressed for about 10 seconds, the "Temperature adjustment" LED will go off, but the setting will be retained.

If the "Temperature adjustment" LED goes out before the setting is completed, start all over again at step 2.

4. Mount the remote control in the hanger.

- ▶ If the remote control is secured to prevent theft. (→Page 12)

To turn the warm water temperature*1 and toilet seat temperature "OFF"

1. Remove the remote control from the hanger.


- ▶ If the remote control is secured to prevent theft. (→Page 12)

2. Select a temperature button you want to turn "OFF" from ("Toilet seat temperature" button), ("Warm water temperature" button) and press it.

- ▶ The current temperature level appears.

3. Press the button selected in step 2 repeatedly until the temperature level is set to "OFF".

- ▶ The setting changes each time the button is pressed once

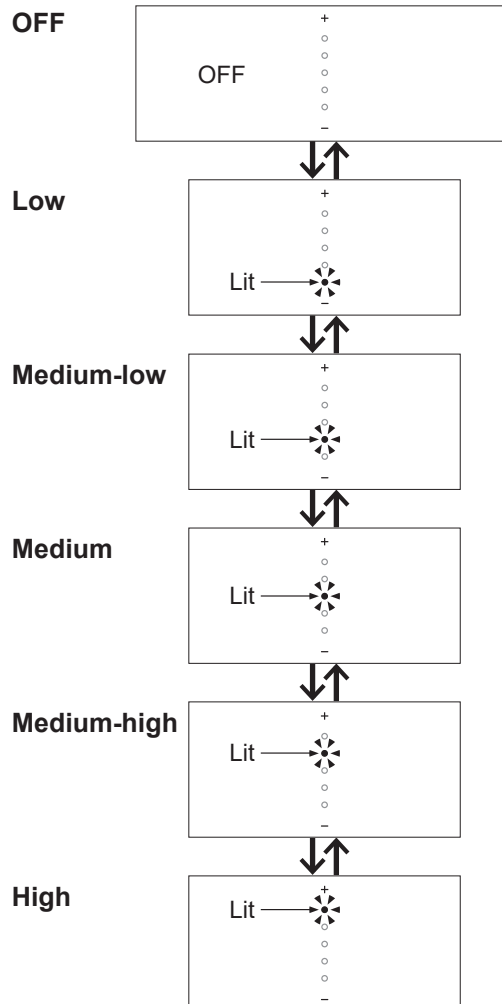

Settings complete

- ▶ When seat temperature is OFF, the SEAT LED is unilluminated.



Note: The "Drying" cannot be turned "OFF".

4. Mount the remote control in the hanger.

- ▶ If the remote control is secured to prevent theft. (→Page 12)

*1 To prevent condensation, the water temperature does not drop below 20 °C even when set to "OFF".

Changing Settings

Setting List


Setting Types	Available Settings Bold: Initial settings
Auto energy saver (→Page 26)	ON/ OFF
Auto energy saver+ (→Page 26)	ON/ OFF
Timer energy saver (→Page 27)	6H/9H/ OFF
Auto flushing* ¹ (→Page 27)	ON /OFF
Auto flush delay* ¹ (→Page 28)	SET 1/ SET 2 /SET 3
Auto flush lid closed* ¹ (→Page 28)	ON/ OFF
Auto open / close (→Page 30)	ON /OFF
Auto close delay (→Page 30)	SET 1/ SET 2
Auto open delay (→Page 31)	SET 1 /SET 2/SET 3
Seat/lid (→Page 31)	Lid /Seat·Lid
Auto wand CLEAN (→Page 32)	ON /OFF
Auto bowl CLEAN (→Page 32)	ON /OFF
Auto underseat CLEAN (→Page 33)	ON /OFF
Deodorizer (→Page 33)	ON /OFF
Auto power deodorizer (→Page 34)	ON /OFF
Night light (→Page 34)	ON/ STANDBY /TIMER
Soft light (→Page 35)	ON /OFF
Bowl light (→Page 36)	ON /OFF
CLEAN indicator (→Page 36)	ON /OFF
Beep sound (→Page 37)	ON /OFF* ²
Pressure/position setting (→Page 37)	ON/ OFF
Personal setting (→Page 38)	ON /OFF
Registering Personal Settings (→Page 38)	Register 1/Register 2/Register 3/Register 4
Sensor detection range (→Page 39)	SET 1/SET 2/ SET 3 /SET 4/SET 5

*¹ Available only when "Flush" button is located on the top side of the remote control. (→Page 18)

*² The beep sounds when settings are being changed, even if the beep noise is turned off. (except for "Pressure/position setting" or "Personal setting")

Setting with buttons on the front of the remote control

Press the button indicated in step 1 for approximately 10 seconds or longer to enter setting mode.

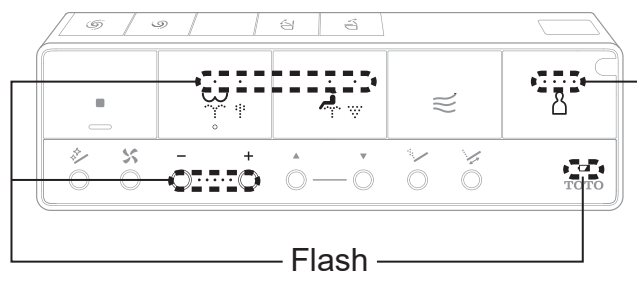

Check

Press "Stop" button about 10 seconds or longer.



Press "Stop" button and "Water pressure adjustment +" button at the same time about 10 seconds or longer.




Note: During setting, if the next button is not pressed within about 60 seconds, the light will stop flashing. If you fail to complete the setting, redo from the step 1.

Setting with buttons on the back of the remote control


Remote control back side

How to remove the remote control (→Page 12)

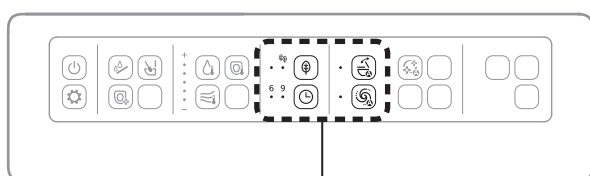

Use the LED to check settings.

▶ Setting buttons (→Pages 26–39)

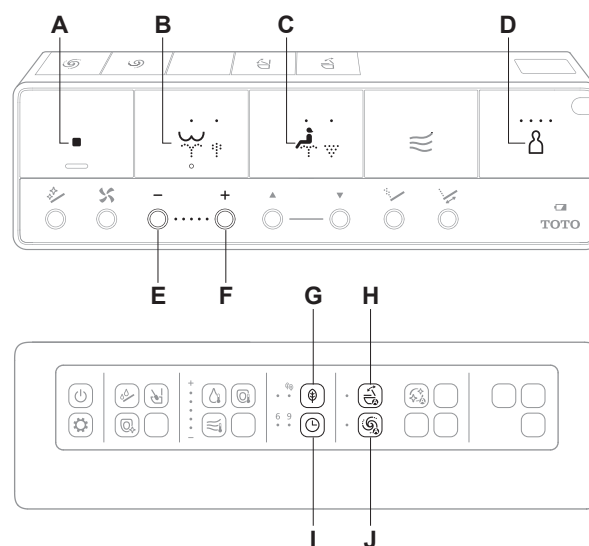

- A Stop button
- B Rear washing button
- C Front washing button
- D Personal setting button
- E Water pressure adjustment - button
- F Water pressure adjustment + button
- G Auto energy saver button
- H Auto open / close button
- I Timer energy saver button
- J Auto flushing button


Changing Settings

The energy saver features

"Auto energy saver", "Auto energy saver+" or "Timer energy saver" can be selected.

To save energy, the temperature of the toilet seat becomes low (or "OFF").

Note: Even if the energy saver is activated (with the toilet seat heater set to Low or OFF), the toilet seat will be temporarily heated when you sit on it. (To reach the set temperature, the toilet seat takes about 15 minutes.) The LED indication on the main display returns to the state for when the energy saver is on.

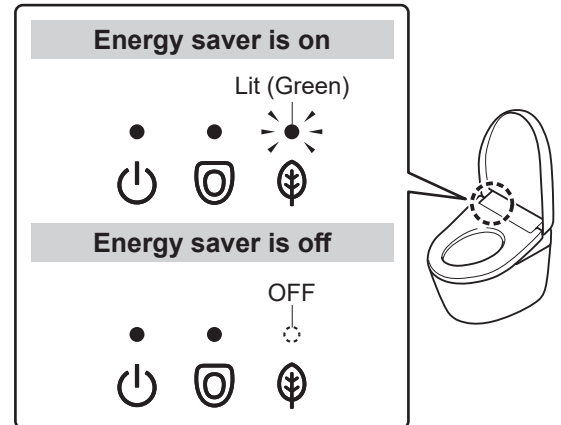


Auto energy saver

You want the product to save energy automatically

The product detects time periods with infrequent use and lowers the toilet seat temperature automatically. It takes about 10 days for the product to determine the periods when it is used relatively less frequently.

When energy saver is in operation

Main display

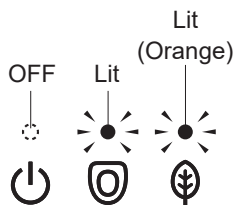

Toilet seat heater




Auto energy saver+

You want to save more energy


In addition to the "Auto energy saver" feature, it automatically turns off the toilet seat heater during time periods when the toilet is not used.

When energy saver is in operation

Main display

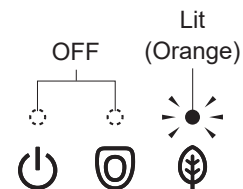

Toilet seat heater

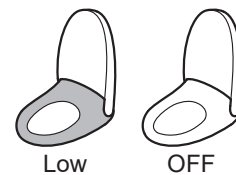

Example

Used infrequently from 9 pm to 6 am



- Set temperature^{*1}
- Low temperature^{*2}
- OFF^{*3}

Example

Not used from 0 am to 4 am



- Set temperature^{*1}
- Low temperature^{*2}
- OFF^{*3}

^{*1} The toilet seat temperature settings on pages 20, 21.

^{*2} The time period when the toilet seat heater is set to a "Low".

^{*3} The time period when the toilet seat heater is set to a "OFF".


Timer energy saver

You want to save energy only for a preset duration of time. (6 hours, 9 hours)

Once the time is set, the toilet seat heater turns off automatically during the set time period every day.

When energy saver is in operation


Main display

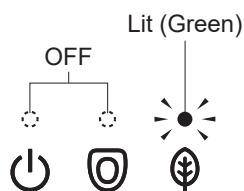

Toilet seat heater



Example

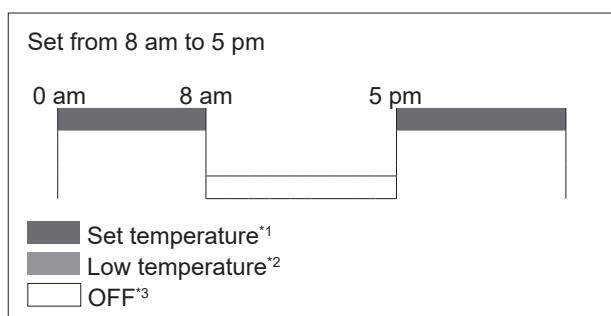

Timer energy saver and Auto energy saver / Auto energy saver+

You want to save the maximum amount of energy possible?

When both "Timer energy saver" and "Auto energy saver / Auto energy saver+" are set, "Auto energy saver / Auto energy saver+" operates when "Timer energy saver" is not operating.

When energy saver is in operation

Main display


During "Auto energy saver / Auto energy saver+":

- Same LED indication as "Auto energy saver / Auto energy saver+" (→Page 24)

During "Timer energy saver":


- Same LED indication as "Timer energy saver" (→See the description on the left)

Toilet seat heater

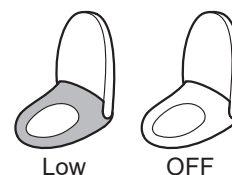

Example

When "Timer energy saver" and "Auto energy saver+" are used together

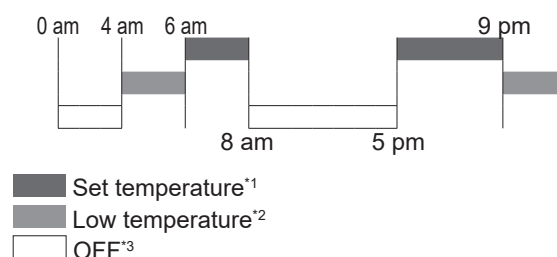

Changing Settings


How to Set

Auto energy saver

1.

Press "Auto energy saver" button.

- The setting changes each time the button is pressed once.

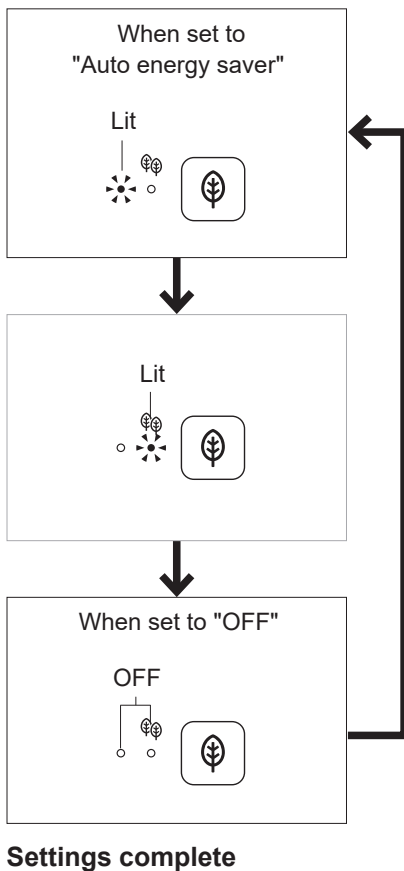


Auto energy saver+

1.

Press "Auto energy saver+" button.

- The setting changes each time the button is pressed once.

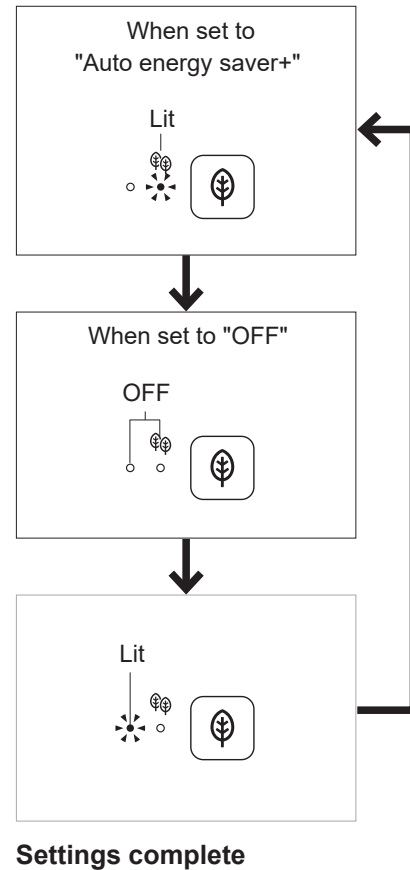

Timer energy saver

Set the "Timer energy saver" at the time you want to start it.


Example: To save energy from 1 am to 7 am (for 6 hours)

1.

When the time of the day reaches 1:00 am at night, press "Timer energy saver" button.

Press the "Timer energy saver" button repeatedly until the "6" LED illuminates.

- The setting changes each time the button is pressed once.

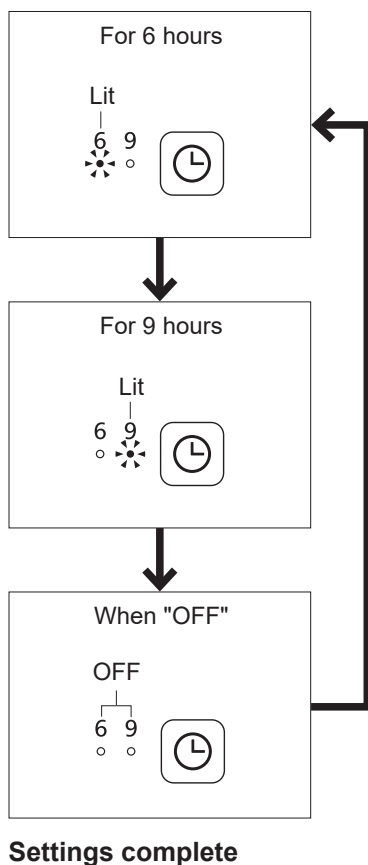

Auto flushing

Set whether or not to clean the bowl unit automatically


1.

Press "Auto flushing" button.

- The setting changes each time the button is pressed once.

Set whether or not to clean the bowl unit automatically.

Check the "Auto flushing" LED (→Page 23)

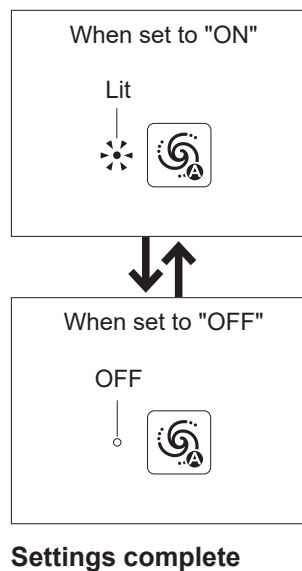


Changing Settings

Auto flush delay*¹

Change the amount of time before the toilet flushes automatically

1. 

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

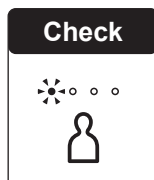

2. 

Press "Rear washing" button.

3. 

Press "Front washing" button.

4. Choose and press the button of the item that you want to set.

Change the amount of time before the toilet flushes automatically.

When set to "SET 1"	When set to "SET 2"	When set to "SET 3"
Press "Water pressure adjustment -" button	Press "Rear washing" button	Press "Water pressure adjustment +" button
		
Short beeps	Long beep	Short beep

SET 1 (Short) : After about 5 seconds
 SET 2 (Standard) : After about 10 seconds
 SET 3 (Long) : After about 15 seconds

Note: If "Auto flush lid closed" is turned ON, the toilet lid closes before flushing the bowl unit as above.


Settings complete

Auto flush lid closed

Set whether or not to close the toilet lid automatically before flushing the bowl unit

1. 

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

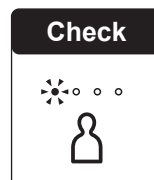

2. 

Press "Rear washing" button.

3. 

Press "Water pressure adjustment +" button.

4. Choose and press the button of the item that you want to set.

When set to "ON"	When set to "OFF"
Press "Rear washing" button.	Press "Front washing" button.
	
Short beep	Long beep

Settings complete

 
*1 The length of time specified for "Auto close delay (Auto flush lid closed)" if "Auto flush lid closed" is turned ON.
 (If the "Flush" button is located on the top side of the remote control)

About "Auto flush lid closed"...
(If the "Flush" button is located on the top side of the remote control)

About 10 seconds after you stand up or move away if you use the toilet in standing position, the toilet lid closes automatically before flushing the bowl unit.

Also, if you press the Flush buttons ("Full flush" or "Light flush")^{*2} on the remote control, the toilet lid closes before flushing the bowl unit.

Using the toilet seat



Stand up

The toilet lid closes in about 10 seconds.

- ▶ The toilet lid closes before flushing the bowl unit.

Using the toilet in standing position

 


Move away


The toilet seat and lid close when you move away.

- ▶ The toilet seat and lid close before flushing the bowl unit.^{*3}

Using the flush buttons on the remote control



Press

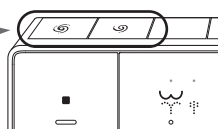

The toilet lid closes.

- ▶ The toilet lid closes before flushing the bowl unit.

"Auto flush lid closed" does not work if "Auto flushing" and "Auto open / close" are set as below: (Except when using the Flush buttons on the remote control)

	Auto flushing	Auto open / close
1)	OFF	ON
2)	ON	OFF
3)	OFF	OFF

- 1) The toilet lid closes automatically but the bowl unit does not flush.
- 2) The bowl unit flushes automatically but the toilet lid does not close.
- 3) The toilet lid does not open / close and the bowl unit does not flush automatically.

Turn both "Auto flushing" and "Auto open / close" ON.
(→Pages 27, 30)

Even if "Auto flushing" is turned ON, "Auto flush lid closed" may not work in some cases. For details, refer to "Auto flush lid closed" does not work" in "Troubleshooting". (→Page 57)

Note: You can change the length of time before water flushes after closing the toilet lid automatically to "SET 1", "SET 2", or "SET 3". (→Page 28)

If you get up slightly from the seat or sit leftward on the seat while seated on it, the seat sensor may not detect properly, which results in the toilet lid being closed and bowl unit being flushed. Sit down so that the seat sensor touches your skin directly. (→Page 8)

While using the toilet in standing position, the toilet lid may close and the bowl unit may be flushed. Stand straight in front of the bowl unit.

^{*2} The type of button varies depending on the type of bowl unit or tank. (→Page 18)

^{*3} The toilet seat and lid close in about 30 seconds and then the bowl unit flushes.

Changing Settings

Auto open / close

Set whether or not to open and close the toilet lid automatically




Press "Auto open / close" button.

- The setting changes each time the button is pressed once.

Set whether or not to open and close the toilet lid automatically.

Check the "Auto open/close" LED (→Page 23)

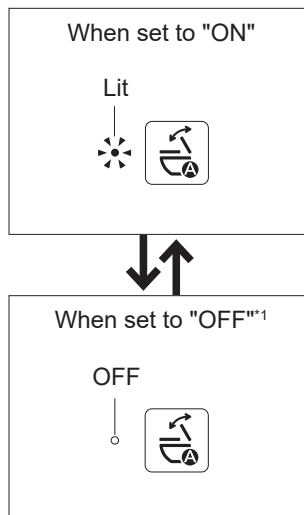

Settings complete

Auto close delay^{*2}

Change the amount of time before the lid/seat closes automatically



Press "Stop" button until all LEDs on the remote control are lit or flashing. (about 10 seconds)

Check



Press "Front washing" button.



Press "Rear washing" button.

4. Choose and press the button of the item that you want to set.

Change the amount of time before the lid/seat closes automatically.

When set to "SET 1"^{*3} Press "Water pressure adjustment -" button. — Short beep	When set to "SET 2" Press "Water pressure adjustment +" button. + Long beep
---	---

SET 1 (Short) : After about 25 seconds

SET 2 (Standard) : After about 90-120 seconds

Settings complete

^{*1} Even if this function is turned OFF, the toilet lid opens before spraying mist for "Auto underseat CLEAN" and closes after completion. (If you do not want to open the toilet lid when spraying mist. →Page 56)


^{*2} If "Auto flush lid closed" is turned ON, you cannot use this setting to change the length of time before closing the toilet lid automatically. Configure the settings for "Auto flush delay". (→Page 28) (If the "Flush" button is located on the top side of the remote control)

Auto open delay

Change the time period till automatic opening
(After closing by hand or remote control.)

1. 

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

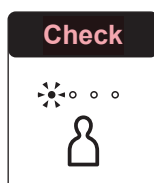

2. 

Press "Front washing" button.

3. 

Press "Water pressure adjustment +" button.

4. Choose and press the button of the item that you want to set.

Change the time period till automatic opening.

When set to "SET 1"	When set to "SET 2"	When set to "SET 3"
Press "Rear washing" button.	Press "Front washing" button.	Press "Water pressure adjustment -" button
		
Long beep	Short beep	Short beeps

SET 1 (Standard) : After about 15 seconds

SET 2 (Middle) : After about 30 seconds

SET 3 (Long) : After about 90 seconds


Settings complete

Seat/lid

Automatically open and close the toilet lid/
Automatically open and close the toilet seat
and toilet lid

1. 

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

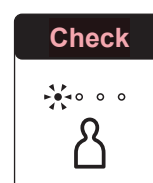

2. 

Press "Front washing" button.

3. 

Press "Water pressure adjustment -" button.

4. Choose and press the button of the item that you want to set.

**Automatically open and close the toilet lid/
Automatically open and close the toilet seat
and toilet lid.**

When set to "Lid"	When set to "Seat • lid"*4*5
Press "Rear washing" button.	Press "Front washing" button.
	
Long beep	Short beep

Settings complete

*3 When set to "SET 1 (Short)", the lid/seat does not open automatically for about 15 seconds after closing automatically.

*4 When "Seat and lid" are set to open automatically, pre-mist is not sprayed.

*5 When "Seat and lid" are set, a light flush may be performed even if you do not stand and use it, depending on the layout of your toilet.


Changing Settings

Auto wand CLEAN

Set whether or not to clean the wand automatically

1. 

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

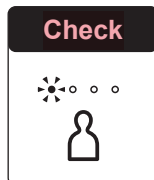

2. +

Press "Water pressure adjustment +" button.

3. 

Press "Rear washing" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to clean the wand automatically.

When set to "ON"	When set to "OFF"
Press "Water pressure adjustment +" button.	Press "Water pressure adjustment -" button.
+	-
Short beep	Long beep


Settings complete

Auto bowl CLEAN*1

Set whether or not to spray mist in the bowl unit automatically

1. 

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

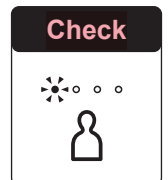

2. +

Press "Water pressure adjustment +" button.

3. 

Press "Front washing" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to spray mist in the bowl unit automatically.

When set to "spray"	When set to "do not spray"
Press "Water pressure adjustment +" button.	Press "Water pressure adjustment -" button.
+	-
Short beep	Long beep

Settings complete


*1 If "Auto bowl CLEAN" is turned OFF, the mist for "Auto underseat CLEAN" is not sprayed.

Auto underseat CLEAN*¹

Set whether or not to spray mist to the back of the toilet seat automatically

1. ■

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

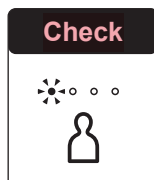

2. +

Press "Water pressure adjustment +" button.

3. -

Press "Water pressure adjustment -" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to spray mist to the back of the toilet seat automatically.

When set to "spray" Press "Rear washing" button.  Short beep	When set to "do not spray" Press "Front washing" button.  Long beep
--	---


Settings complete

Deodorizer

Set whether or not to deodorize automatically after sitting on the toilet seat

1. ■

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

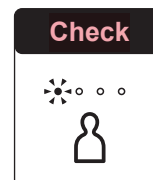

2. -

Press "Water pressure adjustment -" button.

3. 

Press "Front washing" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to deodorize automatically after sitting on the toilet seat.

When set to "ON" Press "Water pressure adjustment +" button. + Short beep	When set to "OFF" Press "Water pressure adjustment -" button. - Long beep
---	---

Settings complete

Changing Settings

Auto power deodorizer

Set whether or not to power deodorize automatically after standing up

1. ■

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)



2. -

Press "Water pressure adjustment -" button.

3. +

Press "Water pressure adjustment +" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to power deodorize automatically after standing up

When set to "ON"	When set to "OFF"
Press "Rear washing" button.	Press "Front washing" button.
Short beep	Long beep

Settings complete


Night light

Set whether or not to change "Soft light" and "Bowl light" to "Night mode", a lighting mode suitable for night, as well as the time window.

To set the time window (timer), set the desired start time.

1. ■ and +

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

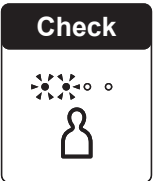

2.

Press "Front washing" button.

3. +

Press "Water pressure adjustment +" button.

4. Choose and press the button of the item that you want to set.

When set to "ON"	When set to "OFF"	When set to "the time window"
ON	OFF (STANDBY)	TIMER
Press "Rear washing" button.	Press "Front washing" button.	Press "Water pressure adjustment -" button.
		-
Short beep	Long beep	Short beep

Settings complete

About "Night light"...


You can change "Soft light" and "Bowl light" to "Night mode", a lighting mode suitable for night.

Note: The light does not turn on if "Soft light" and "Bowl light" are turned OFF.

The "Night light" is turned ON


Soft light

Lights permanently

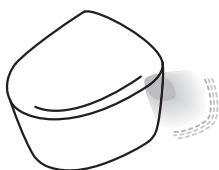

Bowl light

Lights up only while someone is detected

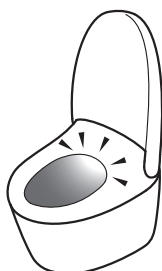

The brightness changes according to human movement.

The "Night light" is turned OFF (STANDBY)


Soft light

Lights up as specified in the settings



Bowl light

Lights up as specified in the settings

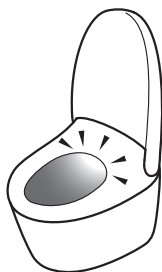

The "Night light" is configured with the timer

ON




OFF (STANDBY)

The light turns ON / OFF (STANDBY) every 12 hours starting from the set time.

Example

Set from 9 pm to 9 am

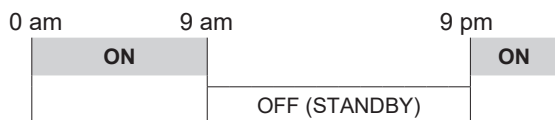

Soft light

Set whether or not to use the soft light

1. ■ and +

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

Check



2. 🚿

Press "Rear washing" button.

3. 🚿

Press "Front washing" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to use the soft light.

When set to "ON"

Press
"Water pressure
adjustment +" button.

+

Short beep

When set to "OFF"

Press
"Water pressure
adjustment -" button.

-

Long beep

Settings complete

Changing Settings

Bowl light

Set whether or not to use the light inside the bowl unit

1. ■ and +

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

Check



2. 

Press "Rear washing" button.

3. +

Press "Water pressure adjustment +" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to use the light inside the bowl unit.

When set to "ON"	When set to "OFF"
Press "Rear washing" button.	Press "Front washing" button.
	
Short beep	Long beep

Settings complete

CLEAN indicator

Set whether or not to light up the CLEAN indicator

1. ■ and +

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

Check



2. 

Press "Rear washing" button.

3. -

Press "Water pressure adjustment -" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to light up the CLEAN indicator

When set to "ON"	When set to "OFF"
Press "Rear washing" button.	Press "Front washing" button.
	
Short beep	Long beep


Settings complete

Beep sound

Set whether or not to make a beep sound

1. ■ and +

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

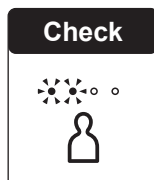

2. -

Press "Water pressure adjustment -" button.

3.

Press "Rear washing" button.

4. Choose and press the button of the item that you want to set.

Set whether or not to make a beep sound.

When set to "ON"	When set to "OFF"
Press "Water pressure adjustment +" button.	Press "Water pressure adjustment -" button.
+	-
Short beep	Long beep


Settings complete

Pressure / position setting

Set whether or not to keep your favorite pressure and position settings

1. ■ and +

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

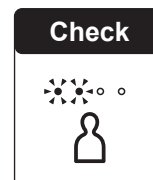

2.

Press "Rear washing" button.

3. +

Press "Water pressure adjustment +" button.


4. -

Press "Water pressure adjustment -" button.
▶ The current setting is displayed.

5. -

Press "Water pressure adjustment -" button.
▶ The setting changes each time the button is pressed once.

Pressure/Position setting

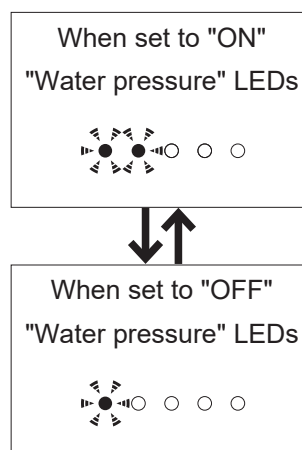

6. ■

Press "Stop" button.

Settings complete


Changing Settings

Personal setting

Set whether or not to use the personal setting

1. ■ and +

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

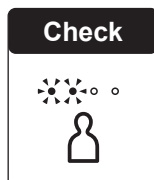

2. -

Press "Water pressure adjustment -" button.

3. +

Press "Water pressure adjustment +" button.

4.

Press "Front washing" button.


► The current setting is displayed.

5. -

Press "Water pressure adjustment -" button.

► The setting changes each time the button is pressed once.

Personal setting

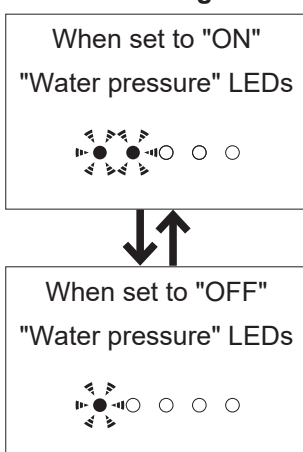

6. ■

Press "Stop" button.

Settings complete

Registering Personal Settings*1


Register your preferred wand position, etc.

1.

Press "Personal setting" button.

Select the location to be set

► The setting changes each time the button is pressed once.

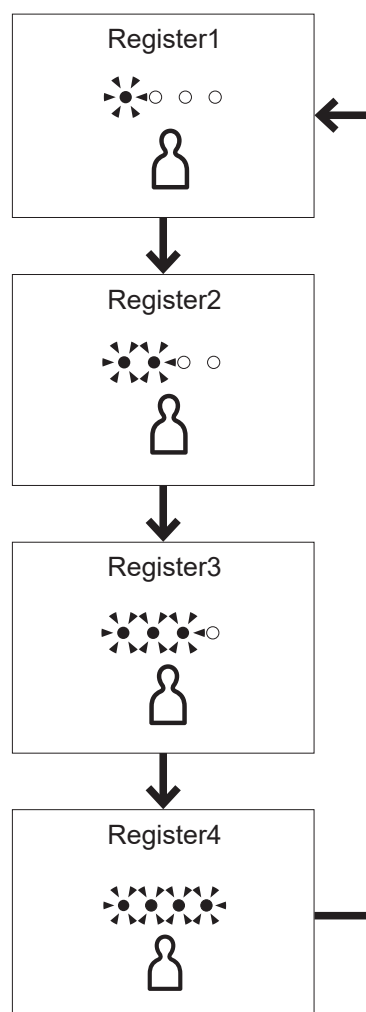

2. Set your preferences for "Wand position", "Water pressure" and "Warm water temperature" during "Rear washing", etc.

3.

Press "Personal setting" button about 5 seconds or longer. (Short beep)

Settings complete

*1 Cannot be performed when "Personal setting" is set to "OFF".

Sensor detection range

You can change when to open the toilet lid upon entering the bathroom

1. 

Press "Stop" button until all LEDs on the remote control are lit or flashing.
(about 10 seconds)

Check



2. 

Press "Front washing" button.

3. 

Press "Rear washing" button.

4. 

Press "Front washing" button.

► The current setting is displayed.

5. **-** and **+**


Use the "Water pressure adjustment -" and "Water pressure adjustment +" buttons to select "SET 1", "SET 2", "SET 3", "SET 4", or "SET 5".

► The setting changes each time the button is pressed once.


(Example)

When to open the toilet lid upon entering the bathroom.

Detect nearer

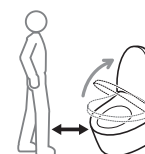


Shortest

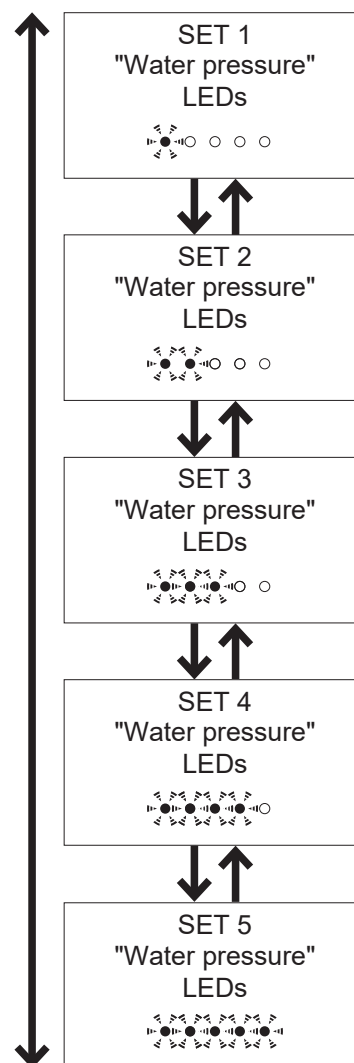

Longest

Detect farther

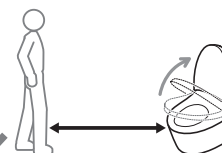

6. 

Press "Stop" button.

Settings complete

Maintenance

Before maintenance

WARNING

Always turn off the power before maintenance or inspection.

Failure to do so may cause electric shock or malfunction, resulting in a breakdown.

For safety, turn the power OFF before maintenance.*1*2

When the power is turned OFF, the Power LED is unilluminated.



To turn the power "OFF"

Switch the breaker on the distribution board to OFF.

To turn the power "ON"

 
Switch the breaker on the distribution board to ON.

► The "Power" LED illuminates.

Main Unit



- Soft cloth soaked in water



- Toilet paper
- Dry cloth
- Nylon scrubbing brush

May cause damage.

Approximately daily

1. Turn the power "OFF". (→See the description on the left)

2. Wipe with a soft cloth that has been soaked in water and wrung out thoroughly.

For heavy dirt

Wipe with a soft cloth soaked in diluted, pH neutral kitchen detergent, and then wipe with a soft cloth soaked in water.



- pH neutral kitchen detergent



- Paint thinner
- Benzene
- Powdered cleanser

3. Turn the power "ON". (→See the description on the left)

► The "Power" LED illuminates.

Attention

This product is an electric appliance. Be careful not to let water seep inside or leave detergent in the gap between the main unit and bowl unit.

Do not put any cleaning solution directly onto the warm air outlet or cover around the wand, etc.

May damage plastic parts or cause a malfunction.

When using a toilet cleaner to clean the toilet, rinse it off within 3 minutes and leave the toilet seat and toilet lid open.

Wipe off any cleaner that remains on the bowl unit. If vapor from a toilet cleaner enters the main unit, it may cause a malfunction.

<If "Auto flush lid closed" (→Pages 28, 29) is turned ON> (→Page 9)

Do not press or pull the warm air outlet or cover around the wand with excessive force.

Doing so may cause damage or failure.

Wipe the back surface of the toilet seat and the toilet seat cushions with a soft cloth tightly wrung out with water.

Otherwise adhesion of dirt may result in discoloration.

Be sure to wipe off any water droplets on the toilet seat.

Otherwise, the seat sensor may malfunction.

*1 Except when using "Wand cleaning" and "Manual spray".

*2 The toilet lid does not open automatically for about 20 seconds after the power is turned ON (preparing).

Operate with the remote control.

Manual spray

EWATER+ mist can be sprayed to separate dirt from the surface for maintenance.

Approximately daily

<Manual spray>

Remote control back side

How to remove the remote control (→Page 12)

- 1) 

Press "Manual spray" button.

- EWATER+ mist is sprayed on the bowl unit and underneath the front of the toilet seat.

Note: It cannot be used when the wand is out or when you are sitting on the toilet seat.

 
Maintenance

Gap between the Main Unit and Bowl Unit

You can remove the main unit to clean the top of the bowl unit and the bottom of the main unit.



- Soft cloth soaked in water



- Toilet paper
 - Dry cloth
 - Nylon scrubbing brush
- May cause damage.

Approximately once a month


1. Turn the power "OFF". (→Page 40)

⚠ CAUTION

If the power is not turned off, the unit may malfunction, causing a failure or electric shock.

2. Remove the main unit.

Pull the main unit toward you while pressing the "Main unit removal button".

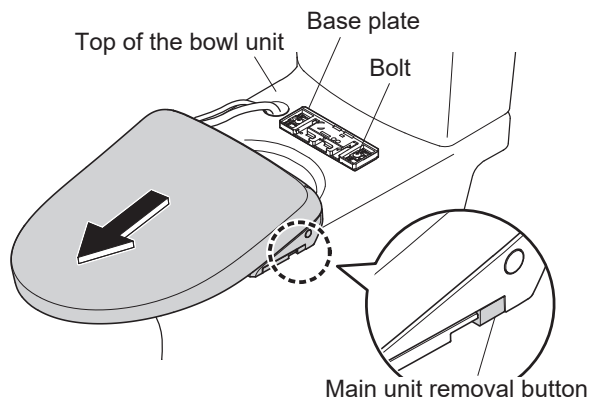

Attention


Do not pull the unit with undue force.
Because the water supply hose and power cord are attached.

Do not excessively bend the water supply hose.

3. Clean the top of the bowl unit and the bottom of the main unit.

Wipe with a soft cloth soaked in a diluted, pH neutral kitchen detergent. Then, dry the surface with a soft cloth soaked in water so that no detergent remains.

4. Mount the main unit.

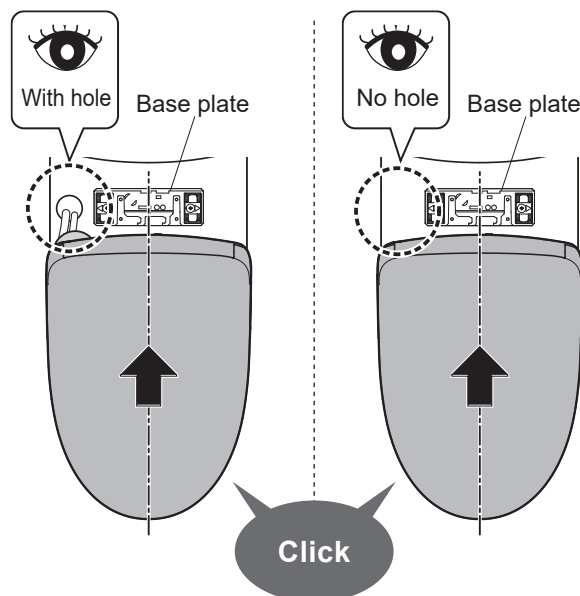

- 1) Pull the power cord and water supply hose into the recess on the bowl unit.
- 2) Align the main unit with the center of the base plate and press it firmly onto the base plate until a click sound is heard.

Align the main unit with the center of the base plate and press it firmly onto the base plate until a click sound is heard.

Attention

Be careful not to pinch the power cord.
Do not excessively bend the water supply hose.

⚠ CAUTION

Push the main unit firmly on to the base plate until a click sound is heard.
Doing so may cause the main unit to come loose and fall, resulting in injury.

- After mounting, check that the main unit does not detach even when pulled.

5. Turn the power "ON". (→Page 40)

 
- The "Power" LED illuminates.

Gap between the Main Unit and the Toilet Lid

The toilet lid can be removed for thorough cleaning.



- Soft cloth soaked in water



- Toilet paper
 - Dry cloth
 - Nylon scrubbing brush
- May cause damage.

Approximately once a month


1. Turn the power "OFF" and remove the main unit. (→Page 40)

2. Remove the toilet lid.

Slightly tilt the toilet lid to the front.

- A Pull left side outward.
- B Disconnect the hinge from the tab and pull up.
- C Disconnect the right side.

Hold with both hands

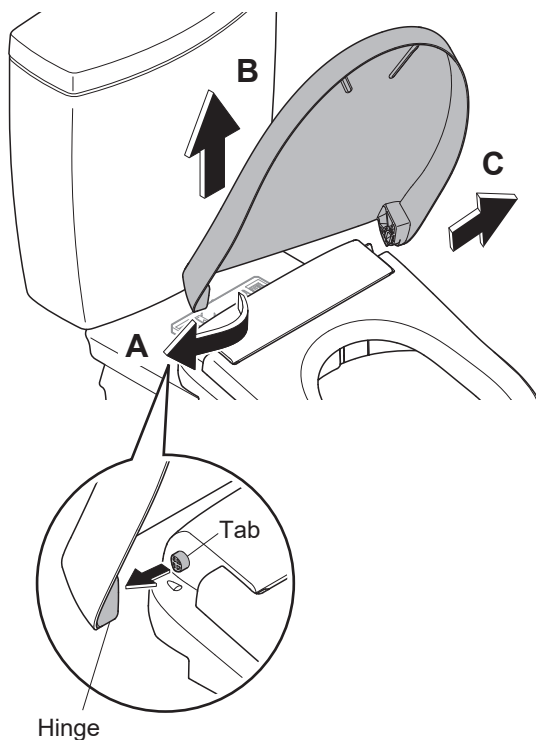

3. Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly.

4. Reinstall the toilet lid.

D Align the right side pin and hinge parts.
Slightly tilt the toilet lid to the front.


E While pulling left side outward.

F Mount by joining the hinge with the tab.

Attention

Be careful not to pinch your fingers.

Hold with both hands

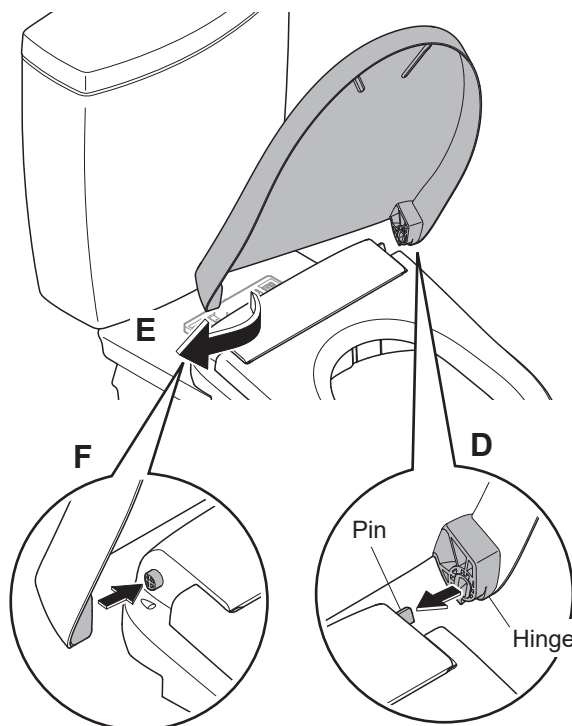

5. Reinstall the main unit and turn the power "ON". (→Page 40)

► The "Power" LED illuminates.

 
6. Open and close the toilet lid to check the reinstallation.

Maintenance

Wand



- Soft cloth soaked in water



- Toilet paper
- Dry cloth
- Nylon scrubbing brush

May cause damage.

Approximately once a month If you notice dirt (Wand cleaning)

1. Extend the wand.

To operate from the back of remote control

Remote control back side

How to remove the remote control (→Page 12)



1)

Press "Wand cleaning" button.

To operate from the front of remote control

Recommended if the remote control is secured to prevent theft, etc.

1)  and 

Press and hold both the "Stop" button and "Water pressure adjustment +" button until the remote control LEDs are lit or flashing. (about 10 seconds)

Check



2) 

Press "Water pressure adjustment +" button.

3) 


Press "Front washing" button.

4) 

Press "Rear washing" button.

- ▶ The wand extends and water sprays out for cleaning.
- ▶ The wand automatically retracts after about 5 minutes.

2. Wipe with a soft cloth that has been soaked in water and wrung out thoroughly.

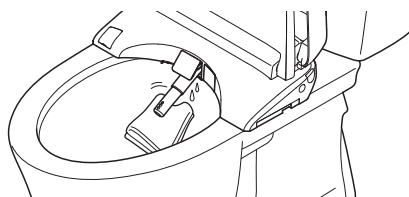

Attention


Do not pull, push or press the wand with excessive force.

May cause damage or malfunction.

3.

Press "Stop" button.

▶ The wand retracts.

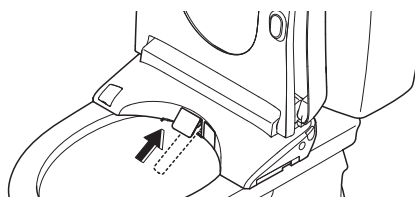


Deodorizing Filter

Approximately once a month

1. Turn the power "OFF". (→Page 40)


2. Remove the deodorizing filter.
Hold the tab and pull outward.

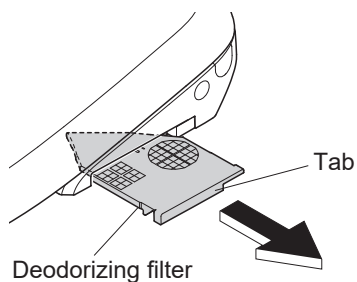


Attention

Do not pull the unit with undue force.
Doing so may cause damage or malfunction.

3. Clean with a tool such as a toothbrush.
► When washing with water, dry off all water before reinserting.

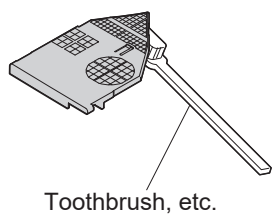

4. Reinsert the deodorizing filter.

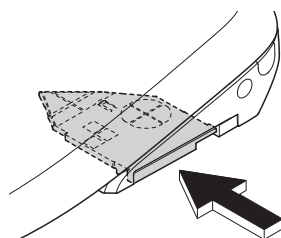

Push firmly until a click sound is heard.

5. Turn the power "ON". (→Page 40)

► The "Power" LED illuminates.

Maintenance

Drain plug with water supply filter

Approximately once every 6 months
If you think the water pressure has weakened

1. Close the shutoff valve. (→Page 52)
▶ The water supply stops.

CAUTION

Do not remove the drain plug with water supply filter while the shutoff valve is open.
Otherwise, water may leak out.


2. 
Press "Wand CLEAN" button.
(Release the pressure from the water supply pipe.)

3. Turn the power "OFF". (→Page 40)


4. Open the toilet seat and lid.

5. Open the cover and remove the drain plug with water supply filter.

- 1) Insert a flat-head screwdriver in the hook of the cover to open it.

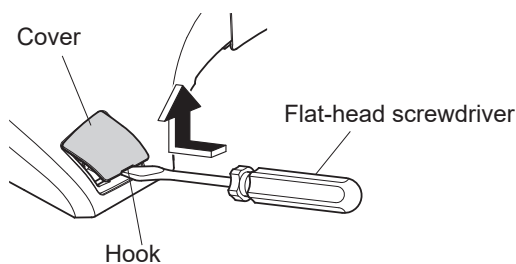

- 2) Loosen the drain plug with water supply filter with a flat-head screwdriver and then pull it.

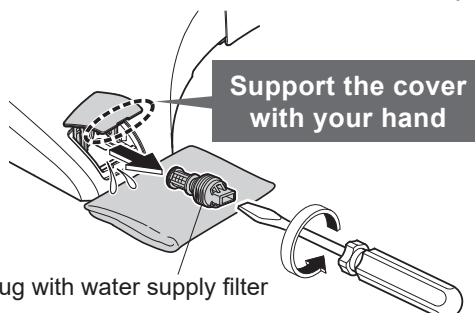


Drain plug with water supply filter

6. Clean the filter with a tool such as a toothbrush.
▶ Also, remove any dust from inside the hole of the drain plug with water supply filter.

7. Reinstall the drain plug with water supply filter and close the cover.

- 1) Insert the drain plug with water supply filter and use a flat-head screwdriver to tighten it securely.

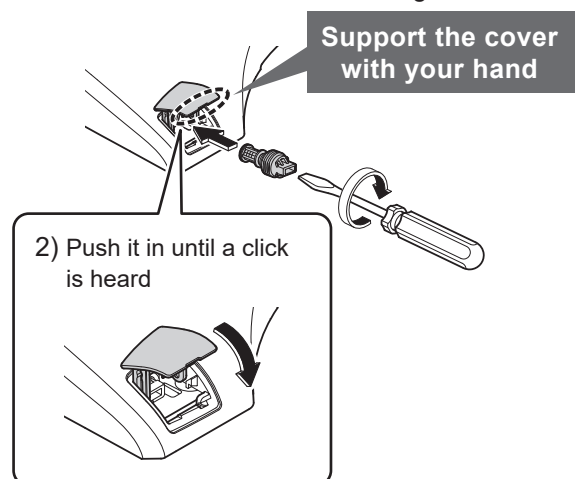

8. Turn the power "ON". (→Page 40)
▶ The "Power" LED illuminates.


9. Open the shutoff valve. (→Page 13)

What to Do?

If the water does not flow due to a water service interruption

Make sure to also check the instruction manual of your bowl unit.

1. Use a bucket to flush the bowl unit.

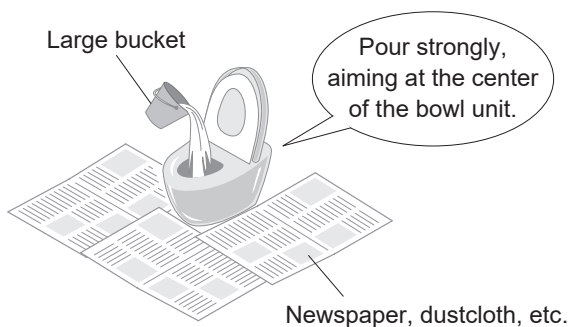

2. If the water level is low after flushing, add more water.
(Until the water level does not rise further.)
► Prevents odors.

Attention

Before starting work, turn "Auto flushing"*1 OFF.
(→Page 27)

When the water supply is restored, make sure to first use water in the bath or kitchen (not with this product) to remove air from the water supply pipes.


Otherwise, air or foreign objects may enter this product, causing failure.

After that, be sure to perform a full flush.

To prevent waste from remaining in the drain pipe.


If you cannot operate with the remote control

If the low battery warning mark "  " on the surface of the remote control is flashing, please replace the batteries.

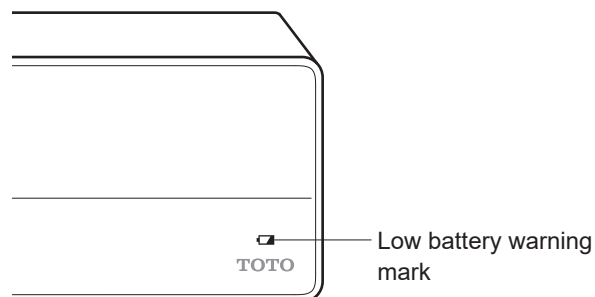

Replacing the batteries

1. Turn the power "OFF" (→Page 40)
2. Remove the remote control from the hanger.
(→Page 12)
3. Open the battery cover and replace with two new AAA batteries. (→Page 12)
► The low battery warning mark is unilluminated.
4. Mount the remote control in the hanger.
(→Page 12)
5. Turn the power "ON". (→Page 40)
► The "Power" LED illuminates.

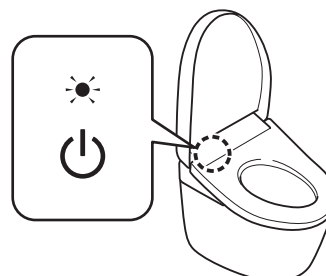

Attention

"ON" and "OFF" settings of the functions such as the energy saver function may be canceled when the batteries are replaced.
Set them again.

*1 Available only when "Flush" button is located on the top side of the remote control. (→Page 18)

What to Do?

Freeze Damage Prevention

When the ambient temperature is likely to drop to 0 °C or lower, take measures to prevent freezing.

Attention

When the ambient temperature is likely to drop to 0 °C or lower, do not use the energy saver feature.
May damage the product.

Warm the bathroom or take measures against freezing so that the ambient temperature does not drop below 0 °C.

Before starting work, set "Auto flushing" *1 (→Page 27) and "Auto open/close" (→Page 30) to "OFF".

1. Close the shutoff valve. (→Page 52)
▶ The water supply stops.

CAUTION

Do not remove the drain plug with water supply filter while the shutoff valve is open.
Otherwise, water may leak out.


2. Drain the water from the toilet tank.
Manipulate the lever/button/etc. until the water stops.

3. 
Press "Wand CLEAN" button.
(Release the pressure from the water supply pipe.)


4. Turn the power "OFF". (→Page 40)

5. Drain the pipe.
1) Open the toilet seat and lid.


- 2) Insert a flat-head screwdriver in the hook of the cover to open it.

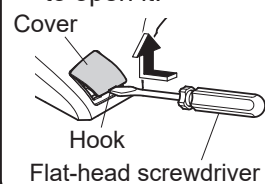

- 3) Loosen the drain plug with water supply filter with a flat-head screwdriver and then pull it.

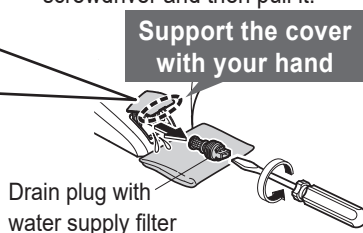


- 4) Only if the water supply hose is exposed on the side of the main unit.
Drain the water from the water supply hose.

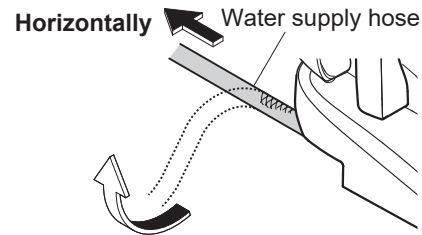

6. Reinstall the drain plug with water supply filter and close the cover.

- 1) Insert the drain plug with water supply filter and use a flat-head screwdriver to tighten it securely.

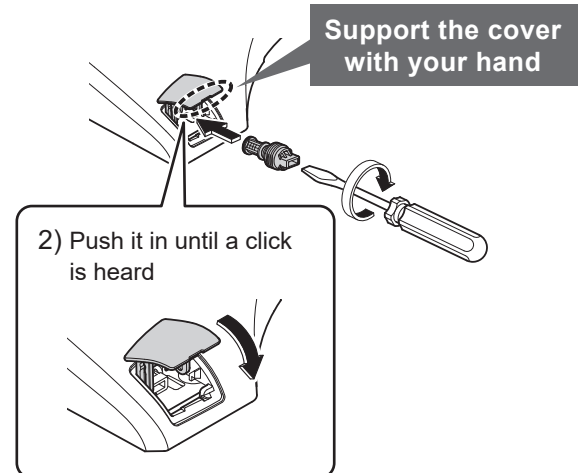

7. Turn the power "ON". (→Page 40)
▶ The "Power" LED illuminates.

8. Set the toilet seat temperature to "High". (→Page 20)
▶ To maintain the temperature, close the toilet seat and toilet lid after finishing work.

To use the product again

- ▶ The water needs to be resupplied. (→Page 50)

*1 Available only when "Flush" button is located on the top side of the remote control. (→Page 18)

Long Periods of Disuse

If the toilet is in a location you will not visit for a long time, drain the water.

The water in the tank may cause malfunctions or become contaminated and cause skin irritation or other problems.

(The water may freeze, causing damage to the product.)

Attention

When there is a risk of freezing, take measures to prevent freezing. (→Page 48)

Otherwise, the product may break down.

How to drain the water

1. Close the shutoff valve. (→Page 52)

► The water supply stops.

CAUTION

Do not remove the drain plug with water supply filter while the shutoff valve is open.

Otherwise, water may leak out.


2. Drain the water from the toilet tank.
Manipulate the lever/button/etc. until the water stops.

3.  Press "Wand CLEAN" button.
(Release the pressure from the water supply pipe.)


4. Turn the power "OFF". (→Page 40)

5. Drain the pipe.


- 1) Open the toilet seat and lid.
- 2) Insert a flat-head screwdriver in the hook of the cover to open it.

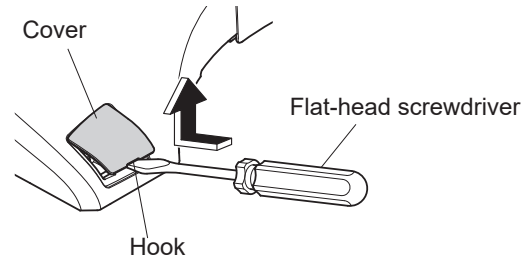

- 3) Loosen the drain plug with water supply filter with a flat-head screwdriver and then pull it.

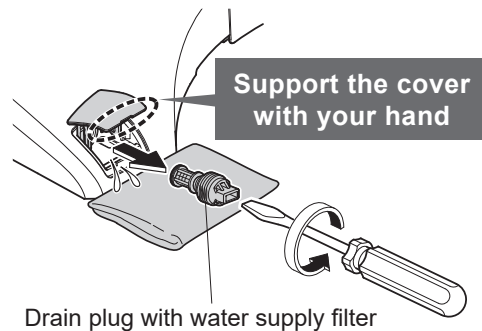

- 4) Only if the water supply hose is exposed on the side of the main unit.
Drain the water from the water supply hose.

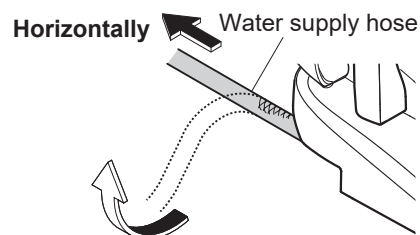


What to Do?

Long Periods of Disuse (Continued)

6. Reinstall the drain plug with water supply filter and close the cover.

- 1) Insert the drain plug with water supply filter and use a flat-head screwdriver to tighten it securely.

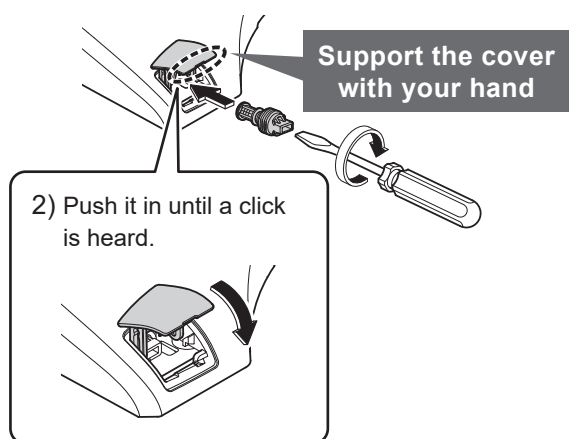

If water may get frozen

- Add antifreeze solution to the water in the bowl to prevent freezing.
(The antifreeze solution should not be flushed out. Collect it before using the toilet and dispose of it.)

To use the product again

- The water needs to be resupplied. (→see the right column)

Resupplying the Water

1. Open the shutoff valve. (→Page 13)
 - Check that water is not leaking from a pipe or the main unit.

2. If the power is not on, turn the power ON. (→Page 40)
 - The "Power" LED illuminates.

3. Discharge water from the wand.


- 1) Keep your hand or arm in contact with the seat sensor. (→Refer to page 8)



Press "Rear washing" button to discharge water from the wand.

- Catch the water in a paper cup or other receptacle.

- 3) Move your hand or arm from the seat sensor

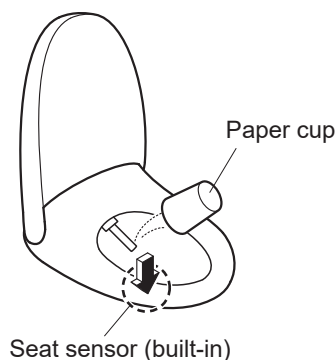


If the remaining water has frozen and no water comes out

- Heat the inside of the bathroom, and warm the water supply hose and shutoff valve using a cloth soaked in warm water.


How to remove the operation guide

To remove, follow the procedure below.

1. Turn the power "OFF". (→Page 40)
2. Remove the remote control from the hanger.
(→Page 12)
3. Remove the hanger and operation guide.

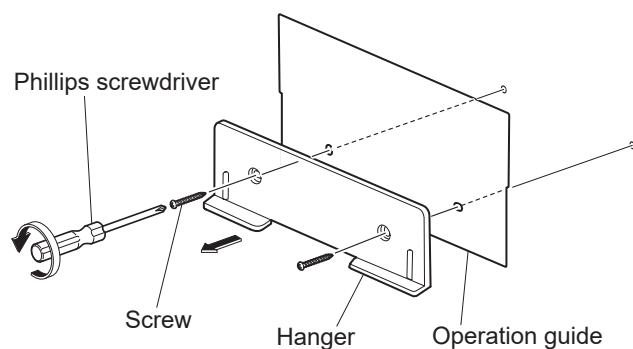

4. Screw the hanger on the wall.

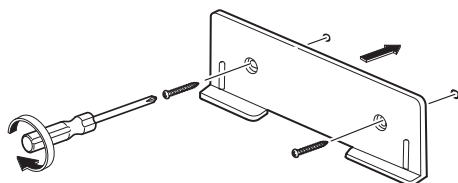

5. Mount the remote control in the hanger.
(→Page 12)

6. Turn the power "ON". (→Page 40)
 - The "Power" LED illuminates.

To install back the operation guide, follow the procedure above.


- Install the operation guide at step 4.

Troubleshooting

First, try the actions described on pages 52–60. If the problem persists, consult the installer, seller or TOTO customer service (→see *contact information on the back cover*).

⚠ CAUTION

If a water leak occurs, close the shutoff valve.

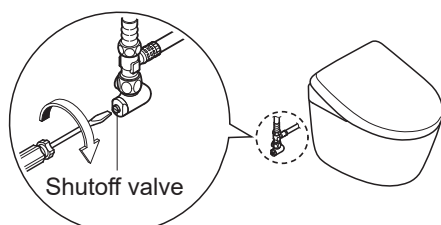

Please check first (A–C)

A: Is the Power LED illuminated?
Is the main unit working?

Is the breaker on the distribution board turned on?

- Check whether there is a power outage or the breaker has turned "OFF".

Is the "Power ON/OFF" setting "OFF"?

- Switch it to "ON" with the remote control. (→Page 13 step 2-2.2)

Is the "Power" LED on the main display flashing?

- The main unit is not mounted properly. Mount them correctly again. (→Page 42)


B: Is the Energy saver LED lit?

- While the LED is lit, energy saver (→Pages 24, 25) is in operation, so the toilet seat temperature may be reduced or the heater may be turned off.

C: Is the remote control working?



Is the low battery warning mark  on the surface of the remote control flashing?

- Replace the batteries. (→Pages 12, 47)

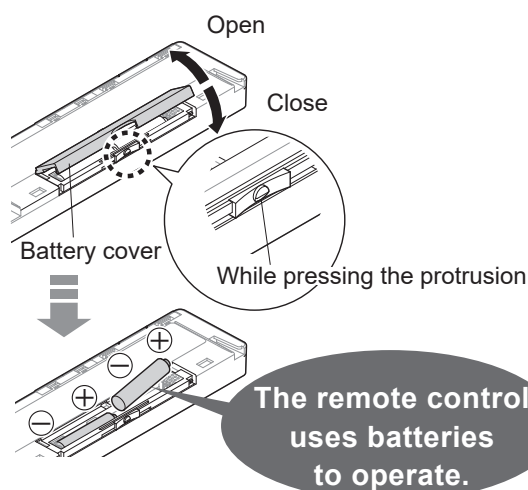

Is the remote control transmitter or the remote control receiver blocked?

 - Remove obstructions, dirt, water droplets or any other blockages.

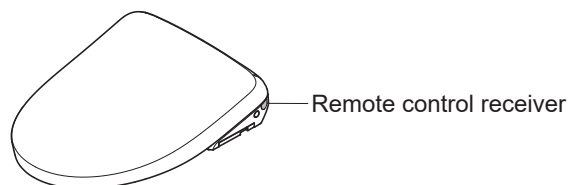

Rear Washing, Front Washing and Wand

Trouble	Please check
The wand (or washing water) does not come out	When the temperature is low, it takes time for the wand to come out after the remote control button is pressed because the water must be warmed up first. Has the toilet been sat "ON" and used continuously for 2 hours or longer? (If so, operation is stopped for safety purposes.) ► Stand up from the seat and then use again. If the water supply pressure drops significantly, for example if water is used elsewhere or if there is a water failure, the function may stop for safety. ► Turn the power OFF and wait about 10 seconds before turning the power ON again. (→Page 13) If the above symptom reappears There may be a malfunction. ► Consult the installer, seller, or TOTO customer service (→see contact information on the back cover). When sitting on the toilet seat, is there a toilet seat cover or clothing on the seat sensor? Or are you sitting without touching the seat sensor? ► Check the location of the seat sensor and sit down so that it touches your skin directly. (→Page 8) Are you using a toilet seat cover, a toilet lid cover or a seat for infants? ► Remove any covers. When using a seat for infants or a soft highchair, remove after each use. (→Page 9) ✂ Are you pressing "Wand CLEAN" button? ✂ When you press "Wand CLEAN" button, "EWATER+" comes out from the vicinity of the wand to clean the wand. ► To clean the wand with it extended, perform "Wand cleaning". (→Page 44)
The wand extends but the washing water does not come out / The washing water pressure is weak	Has a water failure occurred? ► ■ Press "Stop" button on the remote control and wait until water service is restored. Is the shutoff valve closed? ► Fully open the shutoff valve. (→Page 13) Is the drain plug with water supply filter clogged with foreign matter? ► Clean the filter. (→Page 46) Is the water pressure set to a low level? (→Page 17)
The washing water is cold	Is the warm water temperature set to "OFF" or a low level? (→Pages 20, 21) When the temperature of the water supply or the bathroom is low, the water temperature may be low when first sprayed.
Stops in the middle of use	"Rear washing", "Rear soft washing", "Front washing", and "Wide front washing" stop automatically after about 5 minutes of continuous use. Does the seat sensor have difficulty detecting? ► If you get up slightly from the seat or sit leftward on the seat, the seat sensor may temporarily stop detecting your presence, causing washing to stop prematurely. (→Page 8)



Troubleshooting

Rear Washing, Front Washing and Wand (Continued)

Trouble	Please check
Water comes out unexpectedly from the wand	When you sit on the toilet seat, water comes out for several seconds while water is warmed up. Has the CLEAN indicator lit up in a cycle? ► "Auto wand CLEAN" starts and the wand is cleaned. (→Page 18)

Warm air drying

Trouble	Please check
The dryer temperature is low	Is the dryer temperature set to low level? (→Page 20)
Stops in the middle of use	The feature stops automatically after about 10 minutes of continuous use. Does the seat sensor have difficulty detecting? ► If you get up slightly from the seat or sit leftward on the seat, the seat sensor may temporarily stop detecting your presence, causing washing to stop prematurely. (→Page 8)

Flushing^{*1}

Trouble	Please check
For not flushing	Is the shutoff valve fully open? (→Page 13) Has a water failure occurred? ► Use a bucket to flush water. (→Page 47)
The toilet does not flush even when the button of remote control is pressed	Are you pressing the button repeatedly? ► After pressing the flush button, operation will not be accepted for about 10 to 20 seconds.
The bowl unit does not clean automatically or timing is delayed (Auto flushing)	Is "Auto flushing" set to "OFF"? ► Set to "ON". (→Page 27) Even if "Auto flushing" is set to "ON", it is not available in the following instances. For about 60 seconds after the bowl unit flushes. ► After about 60 seconds have passed, use the remote control to flush the bowl unit. (→Page 18) When the time spent sitting on the toilet seat is less than about 6 seconds. ► Use the remote control to flush the bowl unit. (→Page 18) When the toilet is used in standing position. ► The water flows after a maximum of about 20 seconds from when you leave the bathroom. ► If "Auto flush lid closed" is turned ON, 30 seconds after leaving the bathroom, the toilet seat and lid close and then the bowl unit flushes.

^{*1} Available only when "Flush" button is located on the top side of the remote control. (→Page 18)

The bowl unit does not clean automatically or timing is delayed (Auto flushing)

When sitting on the toilet seat, is there a toilet seat cover or clothing on the seat sensor? Or are you sitting without touching the seat sensor?
 ► Check the location of the seat sensor and sit down so that it touches your skin directly. (→Page 8)

The timing for the "Auto flushing" can be changed. ("SET 2" (Standard) → "SET 1" (Short) or "SET 3" (Long)) (→Page 28)

The toilet flushes on its own

Is "Auto flushing" set to "ON"?
 ► You can turn it "OFF". (→Page 27)

Does the seat sensor have difficulty detecting?
 ► If you get up slightly from the seat or sit leftward on the seat, the seat sensor may not detect properly, causing the bowl unit to be flushed during use. (→Page 8)

A light flush may be performed under the following conditions due to the bathroom layout, etc.²

- The toilet seat and lid are open and you stand in front of or walk past the front of the bowl unit.
- "Auto open / close" is set to "Seat•Lid". (→Page 31)

Toilet Seat and Toilet Lid (Auto open/close)

Trouble	Please check
The toilet lid does not open automatically	Is "Auto open/close" set to "OFF"? ► Set to "ON". (→Page 30)
	Even when set to "ON", "Auto open/close" is not performed for about 15 seconds after the toilet seat or toilet lid is closed. When the toilet lid is closed with the remote control or by hand To make the product more user-friendly, a time interval is set from when the lid is closed to when it will open next. ► Move away from the toilet and wait at least about 15 seconds before approaching the bowl unit again or open and close by hand. (→Page 18)
	Is "Auto open delay" set to "SET 2 (Middle)" or "SET 3 (Long)"? (→Page 31)
	The toilet lid does not open automatically for about 20 seconds after the power is turned ON. ► Use the remote control to open or close it. (→Page 18)
	Is a toilet lid or seat cover installed? ► Remove any covers. (→Page 9)
	If a function such as "Auto flushing" is operating, the body sensor may not detect properly. ¹
	You can change the detection range of the body sensor. (→Page 39)
The toilet lid does not close automatically	Is "Auto open/close" set to "OFF"? ► Set to "ON". (→Page 30)
	In the following cases, the toilet lid closes in about 5 minutes. • When you did not sit on the toilet seat • When you sat on the toilet seat for less than 6 seconds

² A full flush will be used depending on the type of bowl unit.

Troubleshooting

Toilet Seat and Toilet Lid (Auto open/close) (Continued)

Trouble	Please check
The toilet lid opens on its own	Because the body sensor can detect movement through the wall or door in front of the toilet, the "Auto open/close" function may cause the toilet lid to open automatically even when you are outside of the bathroom. ▶ You can also set "Auto open/close" to "OFF". (→Page 30) ▶ You can change the detection range of the body sensor. (→Page 39) Is a urinal or wash basin also installed in the bathroom? ▶ The body sensor may detect someone using the urinal, causing the toilet lid to open or close. The toilet lid opens before spraying aftermist for "Auto underseat CLEAN" or "Auto bowl CLEAN" and closes after completion. ▶ You can select not to open the toilet lid when spraying mist. However, it may be less effective than when spraying mist after opening the toilet lid. How to configure the setting Press the "Opening and closing the toilet lid" button and "Water pressure adjustment -" button at the same time for 10 seconds or longer. The setting changes each time they are pressed and held for 10 seconds or longer. • Spraying mist after opening the toilet lid: Short beep ↓ ↑ • Spraying mist without opening the toilet lid: Long beep <Setting complete>
The toilet lid closes on its own	Is "Auto open/close" set to "ON"? ▶ You can turn it "OFF". (→Page 30) Is "Auto close delay" set to "SET 1 (Short)"? (→Page 30) When sitting on the toilet seat, is there a toilet seat cover or clothing on the seat sensor? Or are you sitting without touching the seat sensor? ▶ Check the location of the seat sensor and sit down so that it touches your skin directly. (→Page 8)
The toilet lid and toilet seat open at the same time	Is "Seat/lid" set to "Seat•Lid"? (→Page 31)
Stops (or closes) while opening	If the toilet lid or seat hits an obstruction the first time it opens after the power is turned ON, it may stop (or close) partway during the next operation. ▶ Eliminate any obstructions and turn the power OFF. Turn the power ON again after about 5 seconds. Then press the "Opening and closing the toilet lid" button on the remote control. (→Page 18)
The toilet lid does not close	When the toilet lid closes may differ according to which functions are used. (About 90-120 seconds)
Cannot open or close with the remote control	If it opens automatically. ▶ Check "Is the remote control working?" (→Page 52) If automatic opening does not work either • The toilet lid may not be mounted correctly. ▶ Mount them correctly. (→Page 43) Incorrect detection may occur when operating under fluorescent lights.

Toilet Seat and Toilet Lid

Trouble	Please check
The toilet seat is cold	Is the toilet seat temperature set to "OFF" or a low level? (→Pages 20, 21) Is energy saver in operation? The energy saver feature is on when the "Energy saver" LED is on and the "Power" LED is off on the main display. When you sit on the seat, the toilet seat heater is turned on temporarily and the seat is warmed in about 15 minutes. (→Pages 24, 25) ► You can turn it "OFF" if the energy saver feature is "ON". (→Pages 26, 27) Have you been seated for a long time? After about 20 minutes of sitting, the temperature starts going down, and after about 1 hour, the toilet seat heater is turned "OFF". ► Stand up from the seat and then use again. Is a toilet lid or seat cover installed? ► Remove any covers. (→Page 9)
The toilet seat and lid close on their own and then the bowl unit flushes^{*1}	Is "Auto flush lid closed" turned ON? (→Pages 28, 29)

Auto flush lid closed^{*1}

Trouble	Please check
"Auto flush lid closed" does not activate	Is "Auto flush lid closed" turned OFF? ► Turn it ON. (→Pages 28, 29) If "Auto flush lid closed" is turned ON: Check the "Auto flushing" and "Auto open / close" settings. (→Pages 27, 30) Even if "Auto flushing" is turned ON, "Auto flush lid closed" does not activate in the following cases. For about 60 seconds after the bowl unit flushes. ► After about 60 seconds have passed, use the remote control to flush the bowl unit. (→Page 18) When the time spent sitting on the toilet seat is less than about 6 seconds. ► Use the remote control to flush the bowl unit. (→Page 18) When the toilet is used in standing position. ► About 30 seconds after you leave the bathroom, the toilet seat and lid close and then the bowl unit flushes.
The toilet lid closes too early or too late	You can change "Auto flush delay" to modify the length of time before closing the toilet lid. (SET 1 (Short) / SET 2 (Standard) / SET 3 (Long)) (→Page 28)

^{*1} If the "Flush" button is located on the top side of the remote control. (→Page 18)

Troubleshooting

Energy Saver

Trouble	Please check
The Energy saver LED does not light up	Has the power to the product been turned "OFF" or was there a power outage? The Energy saver LED on the main display may go off when the power is turned ON even if the energy saver feature is ON. It will turn on within about 24 hours since the setting is retained.
The timer energy saver feature is not working	Have the batteries in the remote control been replaced? "Timer energy saver" may be canceled when the batteries are replaced. ▶ Set the timer energy saver again at the time you want to start it. (→Page 27)
The auto energy saver+ or auto energy saver feature is not working	Because this function takes several days learning the usage conditions before starting energy saver, the amount of energy saving may be low, depending on the frequency of use. ▶ Check the energy saver setting. (→Pages 24, 25)

Deodorizer

Trouble	Please check
The deodorizer seems to be not working	Is "Deodorizer" set to "OFF"? ▶ Set to "ON". (→Page 33) Even after sitting down, you do not hear operation sounds. ▶ Sit so your skin is in direct contact with the seat sensor. (→Page 8) If you hear an operation sound from the deodorizer, but odors are not removed. ▶ Clean the deodorizing filter. (→Page 45)
A strange odor is emitted	Are you using an air freshener or deodorizer that you purchased separately? Doing so may reduce the effectiveness of the product's deodorizer or cause strange odors. ▶ Remove the air freshener or deodorizer.
The auto power deodorizer feature is not working	Is "Auto power deodorizer" set to "OFF"? ▶ Set to "ON". (→Page 34) The auto power deodorizer starts about 10 seconds after you stand up from the toilet seat.

Auto bowl CLEAN, Auto underseat CLEAN, Manual Spray

Trouble	Please check
Pre-mist and aftermist do not work	Is "Auto bowl CLEAN" set to "OFF"? ► Set to "ON". (→Page 32) The following functions do not work when the toilet seat is open. Is "Seat/lid" of "Auto open/close" set to "Seat•lid"? ► You can change it to "Lid". (→Page 31) If you use the pre-mist or after-mist immediately after the previous user leaves the bathroom, it may not be activated.
Mist is not sprayed for "Auto underseat CLEAN"	If "Auto bowl CLEAN" is turned OFF, mist is not sprayed for "Auto underseat CLEAN", either. ► Turn "Auto bowl CLEAN" ON. (→Page 32)
Mist is not sprayed to the entire back of the toilet seat	"Auto underseat CLEAN" and "Manual spray" spray mist underneath the front of the toilet seat that urine tends to splash on.
The pre-mist sprays out spontaneously	Because the body sensor can detect movement through the wall or door in front of the toilet, the "Auto bowl CLEAN" function may cause the toilet to pre-mist even when you are outside of the bathroom. ► You can also set "Auto bowl CLEAN" to "OFF". (→Page 32) If the washing functions (e.g.,Rear washing and Front washing) are not used for about 8 hours, "Auto bowl CLEAN" starts and mist is sprayed inside the bowl unit.

Lights

Trouble	Please check
The soft light, bowl light and CLEAN indicator do not light up	Is the "Soft light", "Bowl light", or "CLEAN indicator" turned OFF? ► Set to "ON". (→Pages 35, 36)
The soft light lights permanently	Is "Night light" (Night mode) turned ON? ► If it is turned ON, the Soft light lights permanently. You can also turn it OFF (STANDBY). (→Page 34)
"Night light" (Night mode) is not activated	Have the batteries in the remote control been replaced? "Night light" (Night mode) may be canceled when the batteries are replaced. ► Set them again. (→Page 34)

Others

Trouble	Please check
Water is leaking from the plumbing connections	If any nuts in a connection are loose, firmly tighten them with a tool such as a monkey wrench. ► If the water leak does not stop, close the shutoff valve and consult with TOTO customer service. (→see contact information on the back cover)
The main unit is unstable	Are the bolts that anchor the main unit loose? ► Remove the main unit and then firmly tighten the base plate bolts.

Troubleshooting

Others (Continued)

Trouble	Please check
The main unit makes a sound	When entering the bathroom If "Auto bowl CLEAN" is "ON", you may hear that pre-mist is spraying mist in the bowl unit to make it more difficult for dirt to adhere. ▶ You can turn it "OFF". (→Page 32)
	When using the washing functions (Rear washing, Rear soft washing, or Front washing) You can hear the sound of the pump operating while washing water is being supplied.
	When moving away from the bowl unit after use When "Auto power deodorizer" is "ON", operation sounds are made while the deodorizing power increases for 60 seconds after you stand up from the toilet seat. ▶ You can turn it "OFF". (→Page 34) If "Auto wand CLEAN" is "ON" and you use the washing functions (e.g.,Rear washing and Front washing), you may hear that the wand is extended and cleaned with "EWATER+". ▶ You can turn it "OFF". (→Page 32) If "Auto bowl CLEAN" is "ON" and you sit on the toilet seat and use the toilet, you may hear that mist of "EWATER+" is sprayed inside the bowl unit. ▶ You can turn it "OFF". (→Page 32) You may hear that the wand is extended and the remaining water in the product is drained after "Auto wand CLEAN" and other functions are performed. You may hear the fan ventilating the unit. (About 30 minutes)
	When not using the product (e.g., at night) You may hear the following sounds if "Auto wand CLEAN" or "Auto bowl CLEAN" is "ON" and if you do not use the washing functions (e.g.,Rear washing and Front washing) for about 8 hours. "Auto wand CLEAN" : Sound of cleaning the wand with "EWATER+". : Sound of extending the wand and draining remaining water from the product after operation of functions. "Auto bowl CLEAN" : Sound and operating noise of spraying EWATER+ mist on the bowl unit. ▶ You can turn it "OFF". (→Page 32)
	Because the body sensor can detect movement through the wall or door in front of the toilet, the "Auto open/close" and "Auto bowl CLEAN" functions may cause the toilet to pre-mist, or the lid to open, even when you are outside of the bathroom. ▶ You can also set "Auto open/close" or "Auto bowl CLEAN" to "OFF". (→Pages 30, 32) ▶ You can change the detection range of the body sensor. (→Page 39) Operating noise may occur for extending the wand to prevent damage due to freezing by discharging the water remaining within the product.
The main unit cannot be operated through the remote control	Follow the instructions "Please check first (A–C)". (→Page 52) The following conditions may affect the reception performance of the remote control, resulting in not being able to operate the main unit. • When the room size, the layout of fixtures etc. interfere • When the color of the ceiling or walls is too dark, or their shape or material interfere • When there is a rack or cabinet installed on the wall behind the main unit • When an inverter lighting system is used ▶ Change the position of the remote control and try again.

Specifications

Item	TCF47360***
Rated power supply	AC 220 - 240 V, 50/60 Hz
Rated power consumption	828 - 846 W
Maximum power consumption	1437 - 1448 W (At a water supply temperature of 0 °C)
Frequency band	Body Sensor: 24.15 - 24.25 GHz
Maximum radio-frequency power	Body Sensor: 10.0 dBm
Type of water heater	Instantaneous type
Power cord length	1.2 m (For Singapore, 5.0 m)
Water protection level	IPX4
Washing	
Spray volume ^{*1}	Rear washing: Approx. 0.32 - 0.43 L/min
	Rear soft washing: Approx. 0.32 - 0.43 L/min
	Front washing: Approx. 0.29 - 0.43 L/min
	Wide front washing: Approx. 0.35 - 0.43 L/min
Water temperature	Adjustable temperature range: OFF, about 30 - 40 °C
Heater capacity	1200 - 1428 W
Safety device	Temperature fuse
Backflow prevention device	Vacuum breaker, Check valve
Heated seat	
Surface temperature	Adjustable temperature range: OFF, about 28 - 36 °C (Auto energy saver: about 26 °C, Auto energy saver+: OFF)
Heater capacity	45 - 54 W
Safety device	Temperature fuse
Deodorizer	
Method	O ₂ deodorization
Airflow volume	Normal mode: Approx. 0.09 m ³ /min Power mode: Approx. 0.16 m ³ /min
Power consumption	Normal mode: Approx. 1.6 W, Power mode: Approx. 4.0 W
Warm air dryer	
Warm air temperature ^{*2}	Adjustable temperature range: about 35 - 60 °C
Airflow volume	Approx. 0.25 m ³ /min
Heater capacity	261 - 310 W
Safety device	Temperature fuse
Water supply pressure	Minimum required water pressure: 0.05 MPa (Dynamic), Maximum water pressure: 0.75 MPa (Static)
Water supply temperature	0 - 35 °C
Working ambient temperature	0 - 40 °C
Dimensions	W 383 x D 530 x H 103 mm
Weight	About 5 kg

When disposing of this product, please follow your local or state guidelines for proper disposal.

*1 At 0.20 MPa (Dynamic) water pressure.

*2 Temperature around the warm air outlet measured by TOTO.

Safety Guidelines

A warm-water cleaning toilet seat is an electric appliance.

Continued use after malfunction occurs or use when its life-time is expired may deteriorate the electric components, producing smoke or resulting in a fire.

For safe use of the warm-water cleaning toilet seat

Periodical inspection is recommended.

- Please consider replacing the product when its life-time is expired.



If any abnormality of the product is observed, stop using it and consult the installer, seller or the contact listed on the back cover of this manual.

(A damaged product may cause a fire, electric shock, or may flood the floors with water.)

- Turn off the power immediately and close the shutoff valve.

Limited Warranty

LIMITED ONE YEAR WARRANTY

1. TOTO warrants its products to be free from manufacturing defects under normal use and service for a period of one (1) year from the date of purchase. This warranty is extended only to the ORIGINAL PURCHASER.
2. TOTO's obligations under this warranty are limited to repair or replacement, at TOTO's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with this OWNER'S MANUAL. TOTO reserves the right to make such inspections as may be necessary to determine the cause of the defect. TOTO will not charge for labor or parts in connection with warranty repairs or replacements.
TOTO is not responsible for the cost of removal, return and/or reinstallation of products.
3. This warranty does not apply to the following items:
 - a) Damage or loss sustained in a natural calamity such as fire, earthquake, flood, thunder, electrical storm, etc.
 - b) Damage or loss resulting from any unreasonable use, misuse, abuse, negligence, or improper maintenance of the product.
 - c) Damage or loss resulting from removal, improper repair, or modification of the product.
 - d) Damage or loss resulting from sediments or foreign matter contained in a water system.
 - e) Damage or loss resulting from the quality of water in the region where the product is used.
 - f) Damage or loss resulting from improper installation or from installation of a unit in a harsh and/or hazardous environment.
 - g) Damage or loss resulting from electrical surges or lightning strikes or other acts which are not the fault of TOTO or which the product is not specified to tolerate.
 - h) Damage or loss resulting from normal and customary wear and tear, such as gloss reduction, scratching or fading over time due to use, cleaning practices or water or atmospheric conditions.
4. This warranty gives you specific legal rights. You may have other rights which vary from country to country.
5. To obtain warranty repair service under this warranty, you must take the product or deliver it prepaid to a TOTO service facility, together with a letter stating the problem, or contact a TOTO distributor or product service contractor, or directly to TOTO sales office. If, because of the size of the product or nature of the defect, the product can not be returned to TOTO, receipt by TOTO of written notice of the defect shall constitute delivery. In such case, TOTO may choose to repair the product at the purchaser's location or pay to transport the product to a service facility.

WARNING! TOTO shall not be responsible or liable for any failure of, or damage to, this Product caused by either chloramines in the treatment of public water supply or cleaners containing chlorine (calcium hypochlorite).

NOTE: The use of a high concentrate chlorine or chlorine related products can seriously damage the fittings. This damage can cause leakage and serious property damage.

THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY TOTO. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE PURCHASER. TOTO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE OR EXPENSES INCURRED BY PURCHASER, OR FOR LABOR OR OTHER COSTS DUE TO INSTALLATION OR REMOVAL, OR COSTS OF REPAIRS BY OTHERS, OR FOR ANY OTHER EXPENSE NOT SPECIFICALLY STATED ABOVE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR USE, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU.

TOTO

**TOTO ASIA OCEANIA
PTE. LTD.**

10, Eunos Road 8, #12-07, Singapore Post Centre. Singapore 408600.
Phone : +65-6744-6955 Fax : +65-6841-0819 <http://asia.toto.com/>

**TOTO ASIA OCEANIA
PTE. LTD.**

Middle East Branch LOB19-1701,02, Jebel Ali Free Zone, P.O. box 261804, Dubai U.A.E.
Phone : +971-4-886-5983 Fax : +971-4-886-5986 <http://asia.toto.com/>

**TOTO ASIA OCEANIA
PTE. LTD.**

Manila Representative Office. Unit 706, Rufino Building, Ayala Avenue Corner V.A.
Rufino Street, Makati City, 1226, Philippines.
Phone : +63-2-8887-6643 Fax : +63-2-887-4084 <http://asia.toto.com/>

**TOTO ASIA OCEANIA
PTE. LTD.**

Yangon Branch # 0608 Sakura Tower, 339 Bogyoke Aung San Rd,
Kyauktada Township, Yangon, Myanmar
<http://asia.toto.com/>

**TOTO INDIA INDUSTRIES
PVT. LTD**

1002, Kamla Executive Park, Opposite Vazir Glass Works,
Andheri Kurla Road, Andheri (E), Mumbai-400059.Maharashtra, India.
Phone : +91-22-43112-111/112 Fax : +91-22-28325741/42 Hotline : +91-18001027088
<https://in.toto.com/>

**TOTO VIETNAM
Co., Ltd.**

Lot F-1, F-2, F-3, F-4 Thang Long industrial park, Dong Anh Dist, Ha Noi, Vietnam
Phone: +84-24-38811926 Fax: +84-24-38811928 Hotline: 1800558830
<http://vn.toto.com>

- You are advised to record the following information to allow quick service.

Date of purchase :	Name of shop :
Date : year month day	Tel : ()



This code is for manufacturer
management use.

2024.3.1
D07G56